




**CAUTION!** Wear appropriate PPE when working with chemicals. Backflow prevention required.

## 1 Install and Connect

- Mount SLX enclosure to wall
- Flush supply lines
- Install backflow prevention per local guidelines
- Connect water supply line (3/4" FNPT)
- Connect discharge hoses
- Place chemical container below unit


### Example Installation

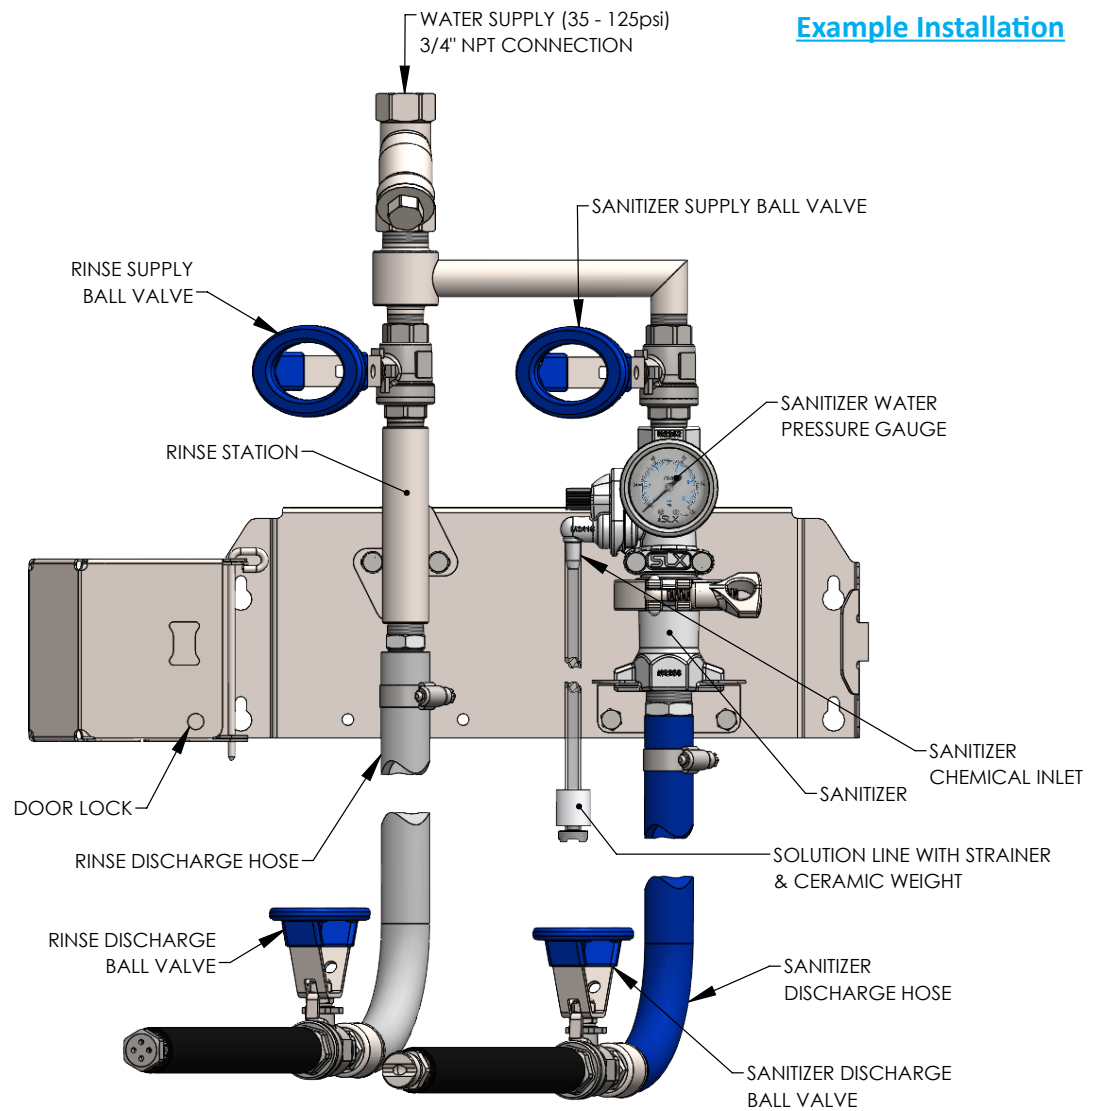

## 2 Dilution

- Select a metering tip for desired dilution ratio
- Install the metering tip by screwing it onto the hose barb for the chemical inlet
- Install chemical suction line to hose barb
- Connect suction line to chemical solution

**Metering Tip Calculator  
Mobile App:**

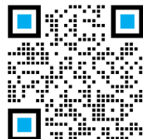


## 3 Operation

- Take hold of spray wand for either system
- Open discharge ball valve
- Open water supply valve - unit will spray
- Verify water pressure is **at least** 35 PSI
- Rinse and Sanitize from top to bottom
- When complete, turn off supply valve
- Store hose depressurized, with discharge valve open, and coiled properly to prevent kinks



**CAUTION!** Wear appropriate PPE when working with chemicals. Backflow prevention required.

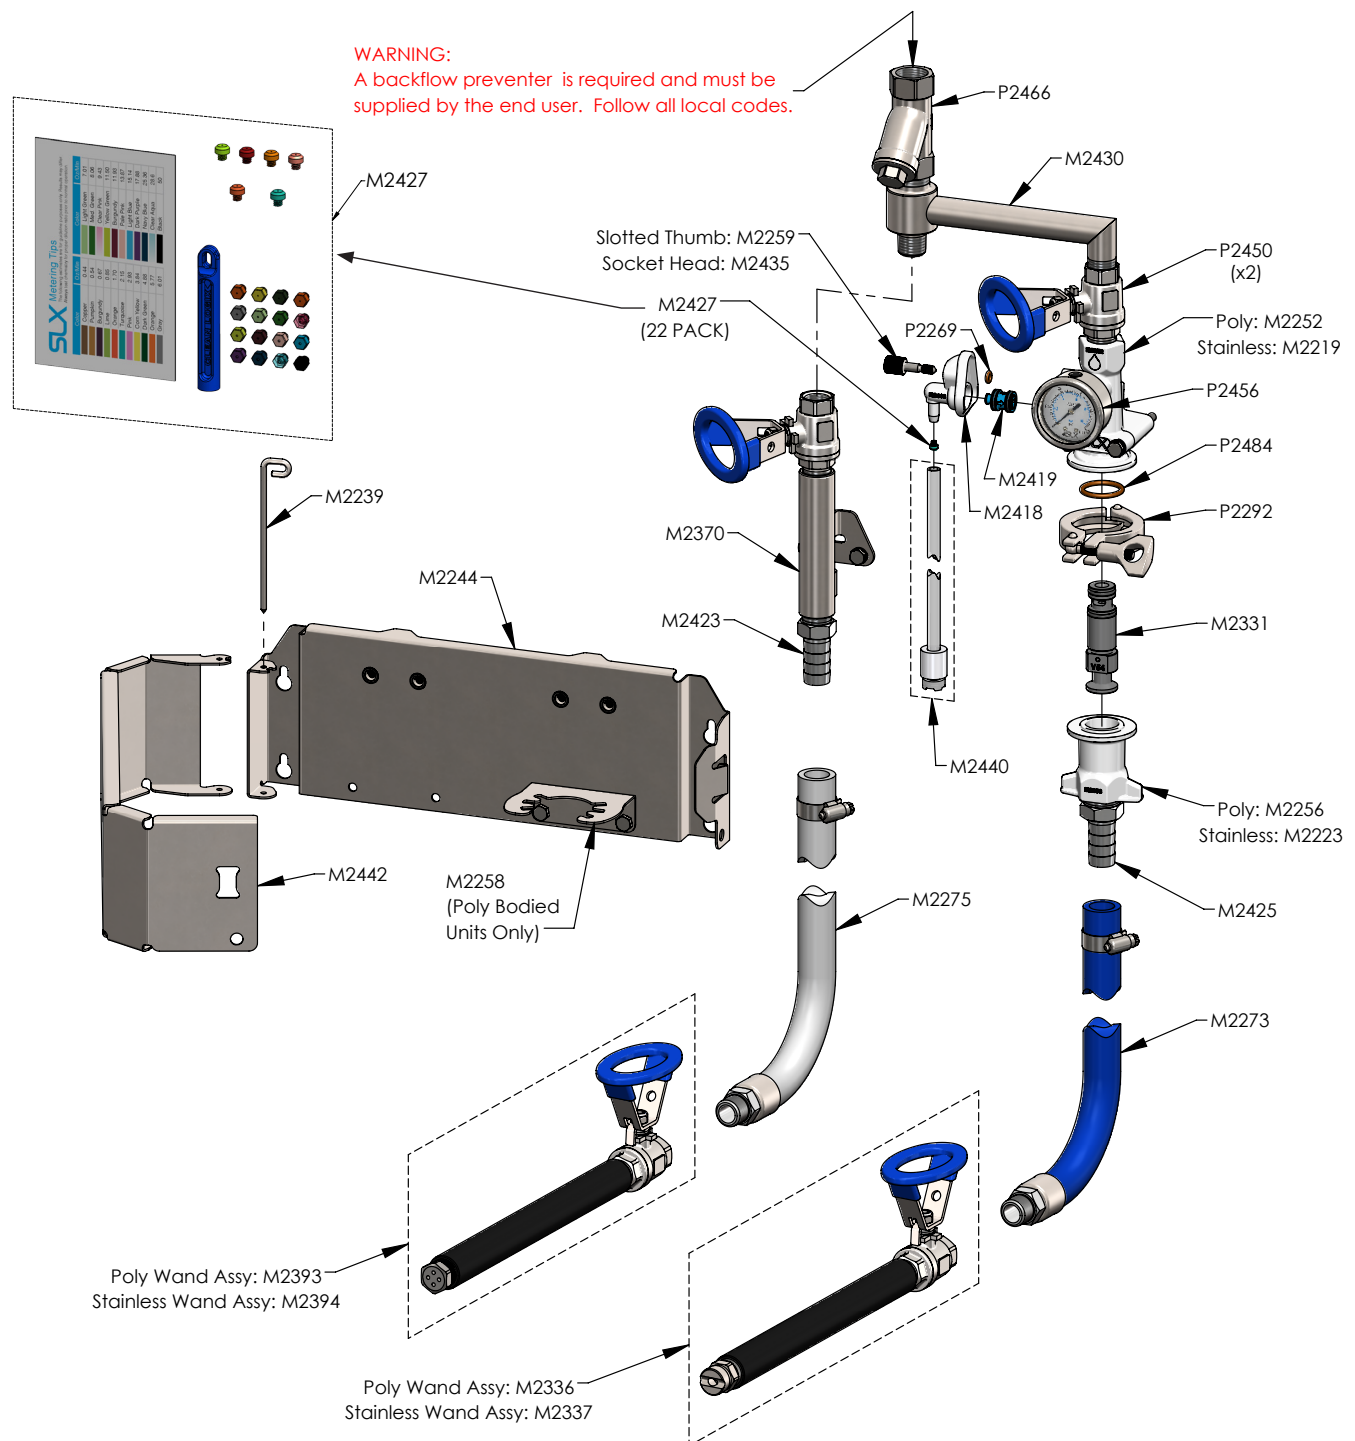

Purchase Replacement Parts:



View User Manual for  
More Details:

