




CAUTION! Always use care and wear appropriate PPE when working with chemicals!

Example Installation

1 Install and Connect

- A. Mount SLX enclosure to wall
- B. Flush supply lines
- C. Connect supply lines:
 - Compressed air (1/4" FNPT)
 - Pump (1/2" FNPT)
- D. Connect discharge hose

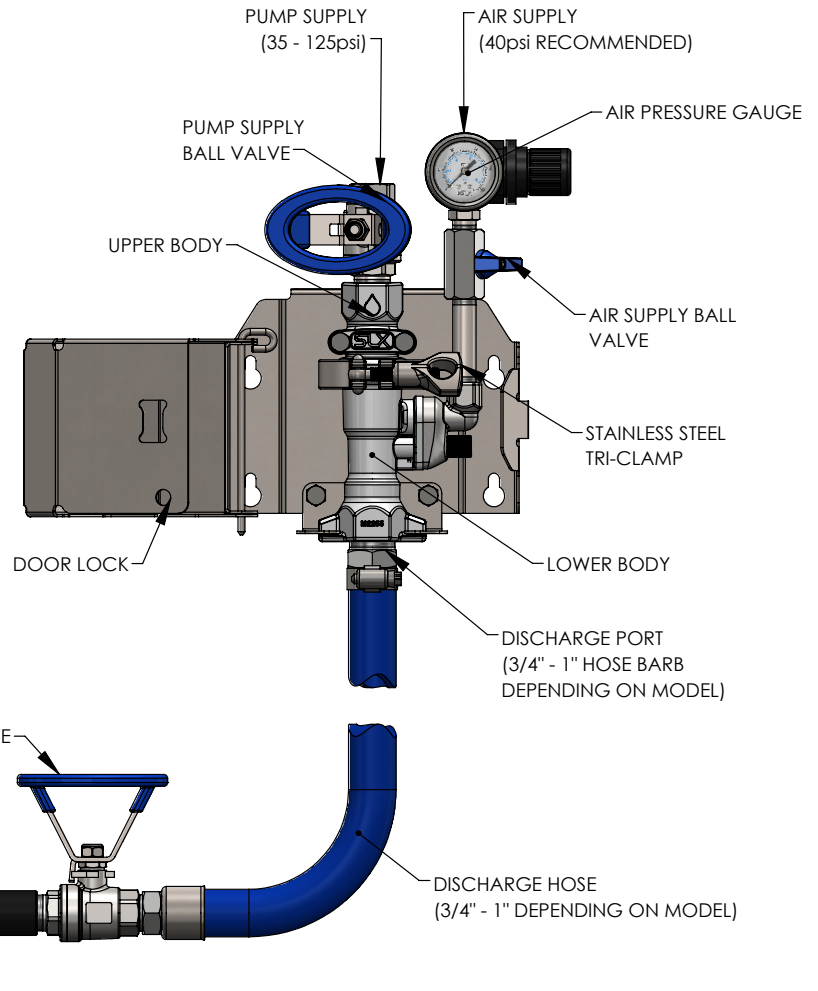

2 Operation

- A. Take hold of spray wand
- B. Open discharge ball valve
- C. Open pump supply valve - unit will spray
- D. Open air supply valve - unit will foam
- E. Adjust air pressure to alter foam quality
- F. Foam equipment and rinse before it dries
- G. When complete, turn off supply valves
- H. Store rinsed hose depressurized, with discharge valve open, and coiled properly to prevent kinks

