




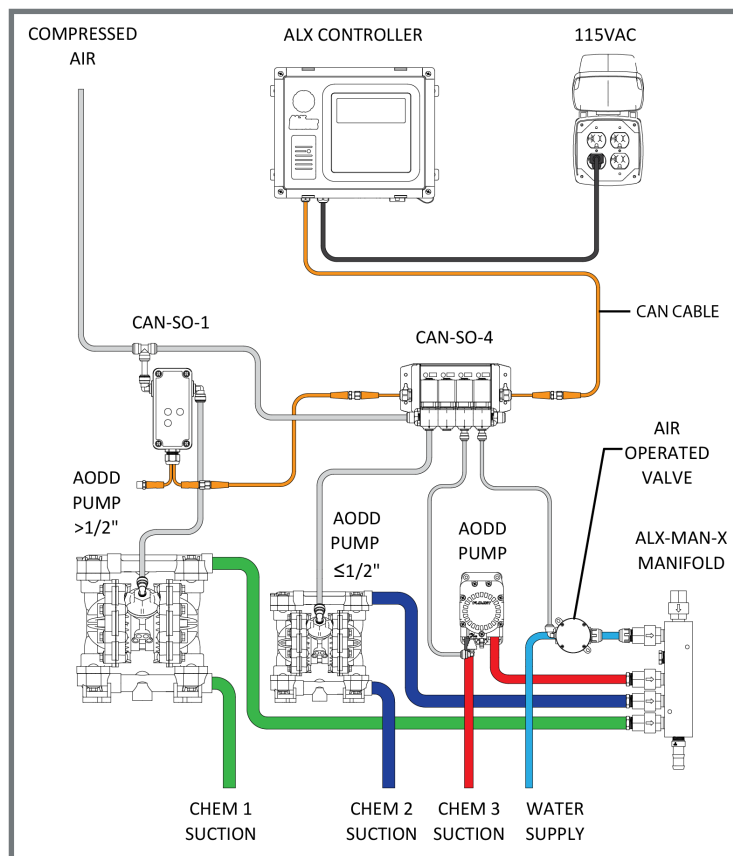
CAUTION! Always use care and wear appropriate PPE when working with chemicals!

1 Install and Connect

- Mount controller / dispensing tower to wall
- Connect Devices to Controller*
- Plumb Devices to pumps (air)
- Plumb pumps to manifolds/trays
- Supply:
 - Compressed air - 10 CFM @ 80 psi
 - Water - 7 GPM @ 35 psi min
 - Electrical - 110VAC, 5A
- Pull out E-stop firmly to turn unit ON.
- Verify solid  lights on all Devices.

* Skip this step if installing a LITE-KIT

Example Installation





2 Create Users

NOTE: Default Admin Passcode is 1234


- ADMIN ►  to Users ► ENTER
- 00-Create New User ► ENTER
- Fill out fields
- Scan RFID if applicable**
- ESC to exit and ENTER to save


**RFID permissions will need to be configured to accept RFID login credentials (see pg. 14 of User Manual)

3 Configure Devices

- ADMIN ►  to Devices ► ENTER
- Selected device will flash 
- ENTER and fill out all fields
- ESC to exit ► ENTER to save

4 Prime Pumps
















- ADMIN ►  to Devices ► ENTER
- Selected a Device ► ENTER
- START ► STOP to prime
- ESC to exit and ENTER to save.

Continued on other side 









CAUTION! Always use care and wear appropriate PPE when working with chemicals!

5 Create Applications

- A. **ADMIN** ►  to Applications ► 
- B. 000-Add New App ► 
- C. Type in a unique 3-digit App#
- D.  to Name: and type a name
- E.  to Add dispense step ► 
- F.   to select Device: ► 
- G.   to select Step Type: ► 
- H. Enter Time and/or Volume ► 
- I. **MULTI-STEP:** Repeat D-G to add more steps
- J.  to exit and  to save








7 Configure Unit

- A. **ADMIN** ►  to Unit Config ► 
- B.  ►   to edit each setting
- C.  to exit

8 Configure Reports

- A. Refer to User Manual for more information.

6 Set Date & Time

- A. **ADMIN** ►  to Set Date & Time ► 
- B.   ►   to edit each setting
- C.  to exit



More Information

Please reference the User Manual provided with product or contact Clean Logix at (616)-438-9200 or sales@clean-logix.com