


Pump Fed Foam Foam Quick Start Guide

CAUTION! Wear appropriate PPE when working with chemicals.

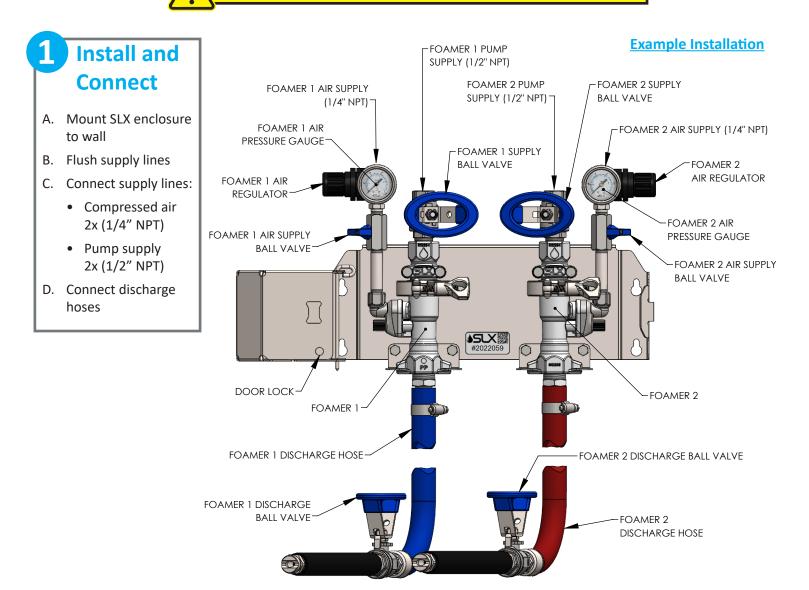

2 Operation

- A. Take hold of spray wand of any station
- B. Open discharge ball valve
- C. Open pump supply valve for the station unit will spray
- D. Open air supply valve unit will foam
- E. Adjust air pressure to alter foam quality
- F. Foam equipment, from bottom to top, and rinse before it dries
- G. When complete, turn off supply valves for all stations
- H. Store hoses depressurized, with discharge valves open, and coiled properly to prevent kinks



Pump Fed Foam Foam Quick Start Guide

CAUTION! Wear appropriate PPE when working with chemicals.

Parts will vary depending on model configuration.

Please consult User Manual or contact us for more details.

