




**CAUTION!** Always use care and wear appropriate PPE when working with chemicals!


## 1 Install and Connect

- Mount controller / dispensing tower to wall
- Connect Devices to Controller\*
- Plumb Devices to pumps (air)
- Plumb pumps to manifolds/trays
- Supply:
  - Compressed air - 10 CFM @ 80 psi
  - Water - 7 GPM @ 35 psi min
  - Electrical - 110VAC, 5A
  - Ethernet\*\* (NOTE: use supplied sealed plug!)
- Pull out E-stop firmly to turn unit ON.
- Verify solid  lights on all Devices.

\* Skip this step if installing an ELITE-KIT

\*\* Not necessary if using WiFi

### Example Installation

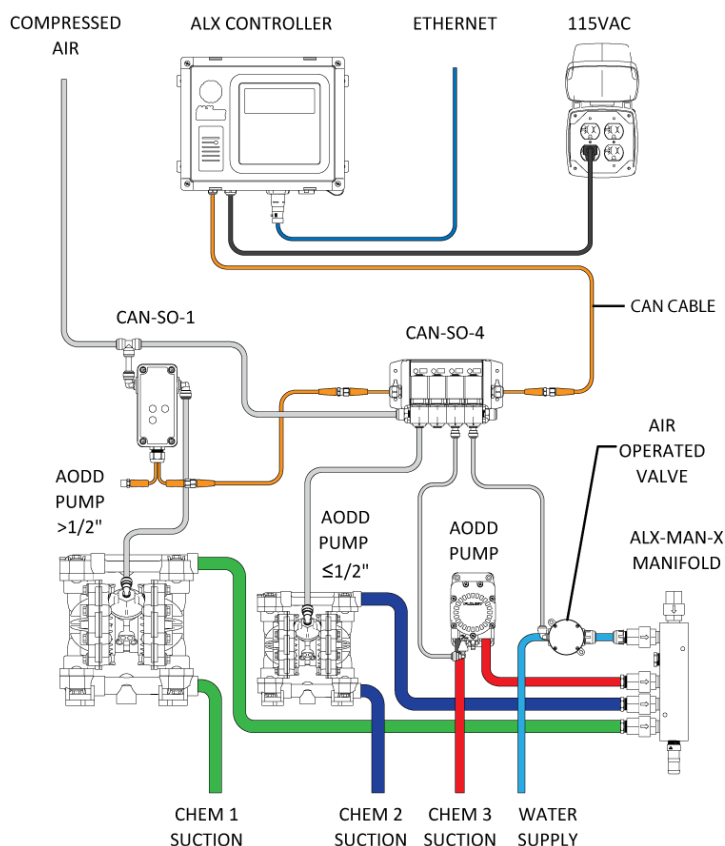




## 2 Create Users




**NOTE: Default Admin Passcode is 1234**


- ADMIN ►  to Users ► ENTER
- 00-Create New User ► ENTER
- Fill out fields
- Scan RFID if applicable
- ESC to exit and  to save

## 3 Configure Devices

- ADMIN ►  to Devices ► ENTER
- Selected device will flash 
- ENTER and fill out all fields
- ESC to exit ►  to save

## 4 Prime and Calibrate Pumps











- ADMIN ►  to Devices ► ENTER
- Selected a Device ► ENTER
- START ► STOP to prime
-  to Edit Calibration ► ENTER
- Cal Point 1 ► ENTER
- Put hose into container with markings
- START to run ► STOP near target
- Accurately measure volume and enter on screen with correct units (oz, Gal, mL, L)
- Repeat F-H for Cal Point 2 if desired
- ESC ► ESC to exit and  to save.

Continued on other side 








**CAUTION!** Always use care and wear appropriate PPE when working with chemicals!





## 5 Create Applications

- ADMIN** ►  to Applications ► **ENTER**
- 000-Add New App ► **ENTER**
- Type in a unique 3-digit APP#
-  to Name: and type a name
-  to Add dispense step ► **ENTER**
-   to select Device: ► 
-   to select Step Type: ► 
- Enter Time and/or Volume ► **ESC**
- Repeat D-G to add more steps
- ESC** to exit and  to save







## 6 Set Date & Time

- ADMIN** ►  to Set Date & Time ► **ENTER**
-   ►   to edit each setting
- ESC** to exit

## 7 Configure Unit

- ADMIN** ►  to Unit Config ► **ENTER**
-  ►   to edit each setting
- ESC** to exit

## 8 Assign Permissions

- ADMIN** ►  to Users ► **ENTER**
- Selected a User ► **ENTER**
-  to Edit Permissions ► **ENTER**
- Use All Apps Perm to set permission count for all Applications at once, OR:
-  ►   to edit each permission
- ESC** ► **ESC** to exit and  to save

## 9 Setup Network

- Refer to User Manual for more information

## 10 Configure Reports

- Refer to User Manual for more information



### More Information

Please reference the User Manual provided with product or contact Clean Logix at (616)-438-9200 or [sales@clean-logix.com](mailto:sales@clean-logix.com)