



USER MANUAL

MODEL:

BLX-1000-GEN2

Full Walkthrough Boot Scrubber

English (Original Instructions)

Updated: 09/18/24



BLX-1000S

Sole Only

BLX-1000V

Vertical

BLX-1000R

Regular

Table of Contents

System Requirements	03	Advanced Configuration	
Specifications	04	Motor Current Sensor	13
Installation		Brush RPM Adjustment	13
Physical Set-Up	06	Drive Parameters	14
Plumbing Connections	07	Timing Relay	14
Motor Speed Adjustment	08	Maintenance	15
Operation		Troubleshooting	16
Start Up	09	Appendices	
Use	09	Parts Callouts	18
Shut Down	09	Electrical Schematics	28
Cleaning		Non-Dilution Flojet (Pump Fed)	30
Opening Gate	10	RP Remote Panel	35
Removing Brushes	10		
Removing Steps & Spring Balancer	12		



WARNING:

1. All personnel using this unit must be familiar with the information contained in this manual. Follow all installation and maintenance instructions.
2. Always wear appropriate footwear. Secure or remove loose items on footwear.
3. Ensure solid footing and use both hands when operating the unit.
4. Avoid contact of chemicals with skin and eyes. If contact occurs, see MSDS sheet for further first aid measures.
5. Follow safety instructions of chemical manufacturer (MSDS).
6. Always follow plant and OSHA guidelines about the use of equipment.
7. Disconnect power before servicing equipment.
8. Always follow safety precautions and obey warning labels. Failure to do so could result in injury or death.



Overview

The BLX-1000-GEN2 is a full size walkthrough footwear scrubbing unit built to accommodate 1-2 users at a time with the ability to put through 20-25 user per minute (may vary depending on soil load and/or facility cleaning requirements).

The included user manual contains installation, operation, and maintenance instructions for all **BLX-1000-GEN2** Boot Scrubbers (i.e. **Regular**, **Vertical**, and **Sole-Only** models). The reference images and diagrams contained within will vary by model, but are subject to the same procedures as outlined.

For further support or information please contact your sanitation representative or Clean Logix technical support.

System Requirements

Water Supply

- Flow: 1:670 GPM (6.32 l/m) minimum*
- Pressure: 30-60 psi (207-414 kPa)**
- Temperature: 40-100°F (4-38°C)



WARNING:

DO NOT EXCEED maximum water temperature! Damage to brushes can result.

Minimum 3/8" supply piping size recommended

****Minimum pressure must be maintained during specified water flow!***

*****For consistent operation of Venturi Injector and spray nozzles, a water pressure regulator and filter is recommended.***

NOTE: A back flow preventer must be installed in the water line to this unit. Check local codes to ensure proper installation.

Electrical

- 230VAC, single phase, 60Hz, 12.4A (BLX-1000_-GEN2)
- 480VAC, triple phase, 60Hz, 15A (BLX-1000_-GEN2-480V)



WARNING:

DO NOT use flammable liquids (i.e. alcohol based solutions or similar) without dilution.

Specifications

Materials of Construction

- 304L and 316 stainless steel
- Polyethylene (high density, low density, and UHMW)
- Polypropylene

Dimensions

- 99 3/8" x 45 1/8" x 55" (2.52m x 1.15m x 1.4m)

Test Results

- Water Consumption: 2.5-2.75 GPM (9.46-10.41 L/m)
- Minimum Chemical Dilution Ratio: 1:230*

***NOTE:** Unit tested at 70°F using water with 30-50 psi injector inlet pressure and capillary-tube style injector metering tip.

- Noise level: 72 dBA - measured at 1m distance, VFD set to full speed (60Hz).
- Max grate load: 250 lbs. (113.4 kg.) per person or 400 lbs. (181.4 kg.) total.

Cleaning Methods

See cleaning section (pages 10-12) for model specific disassembly and cleaning instructions. For chemistry recommendations consult the table below:

Use Case	Chemical Type
Organic Soils	Chlorinated Alkaline or Alkaline based foaming cleaner
Mineral Buildup	Acid based foaming cleaner

NOTE: Chemistry used must be compatible with materials of construction (listed above).

Weights (dependent on model)


Product / Part	Weight (lbs.)	Weight (kg)
BLX-1000R (overall)	687.73 lbs.	312.6 kg
BLX-1000S (overall)	676.46 lbs.	307.5 kg
BLX-1000V3 (overall)	696.37 lbs.	316.5 kg
BLX-1000V6 (overall)	701.45 lbs.	318.8 kg
BLX-1000V9 (overall)	711.46 lbs.	323.4 kg
1000R Grate (hinged)	32.5 lbs.	14.8 kg
1000R Grate (overall)	62.5 lbs.	28.4 kg
1000S Grate (hinged)	33.7 lbs.	15.3 kg
1000S Grate (overall)	64.8 lbs.	29.5 kg
1000V Grate (hinged)	34.7 lbs.	15.8 kg
1000V Grate (overall)	66.7 lbs.	30.3 kg
1000V9 Grate (hinged)	37.9 lbs.	17.2 kg
1000V9 Grate (overall)	72.8 lbs.	33.1 kg
39" Horizontal Brush (single)	12 lbs.	5.5 kg
R - 24" Combo Brush	17.8 lbs.	8.1 kg
S - 24" Brush	5.5 lbs.	2.5 kg
V - 6" Bottom Brush (single)	1.9 lbs.	0.9 kg
V3 - Vertical Brush (single)	1.3 lbs.	0.6 kg
V6 - Vertical Brush (single)	2.1 lbs.	1.0 kg
V9 - Vertical Brush (single)	2.9 lbs.	1.3 kg
Gear Reducer	20 lbs.	9.1 kg
Motor	25 lbs.	11.4 kg
Motor Cover	7.6 lbs.	3.5 kg
Step (single)	11.1 lbs.	5.0 kg

USER MANUAL: BLX-1000-GEN2


READ ALL INSTRUCTIONS BEFORE OPERATING EQUIPMENT



Installation

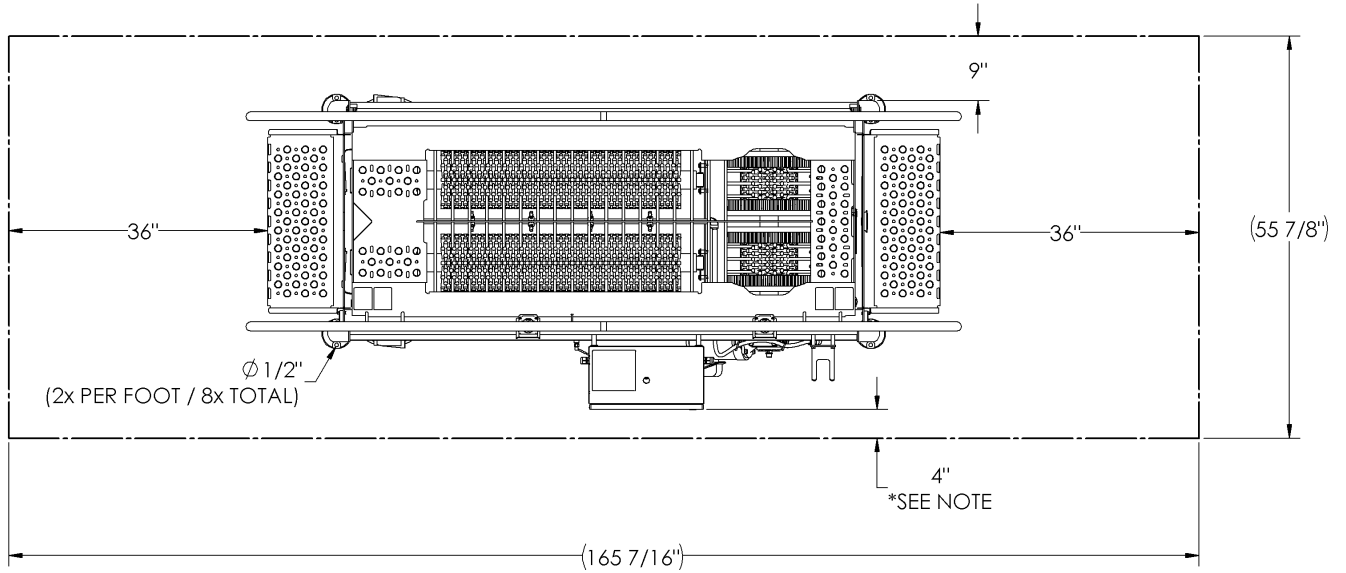

NOTE: For fixed installations, area in front of electrical panel must have at least 36" of clearance.

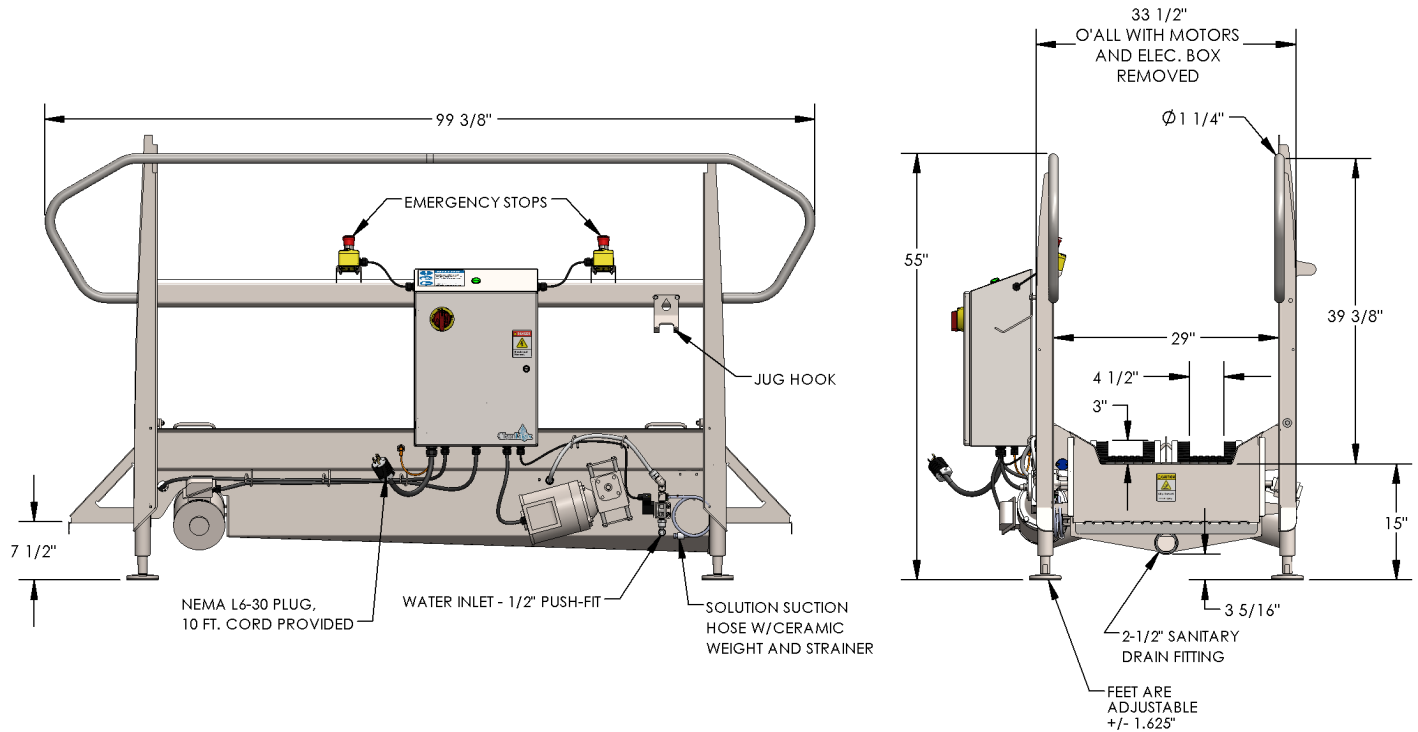

Installation

Physical Set Up:

1. Using a pallet jack or hi-lo, set unit in desired location.

NOTE: To move the unit use a pallet jack or a hi-lo to lift from the bottom or using the handrails. Pad the forks to protect the finish. See [Figure 6.1] for lift point recommendations.

CAUTION:

Overall weight of unit exceeds 670 lbs. See Specifications section (page 4) for model specific weights.

2. Aspects to consider when deciding on placement:
 - Clearance for entering and exiting
 - Location of drain
 - Emergency exit paths or egress
 - Head room for personnel while using the unit
 - Access to control box
 - Connections for water and electricity
3. Use a level to verify the unit is stable and leveled at each end of the tub [Figure 6.2]. Adjust each leveling foot as necessary by twisting clockwise or counter-clockwise to increase or decrease the height.
4. Connect unit to electrical supply.

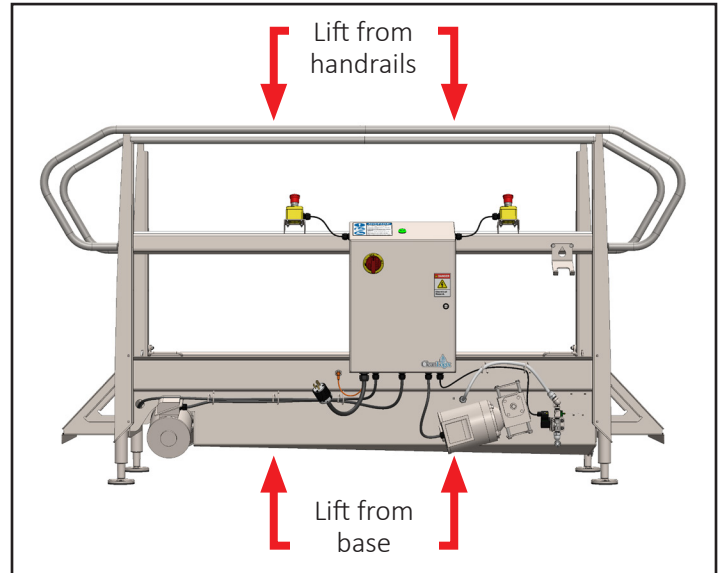


Fig. 6.1: Recommended lift points for moving unit (either from bottom or handrails).

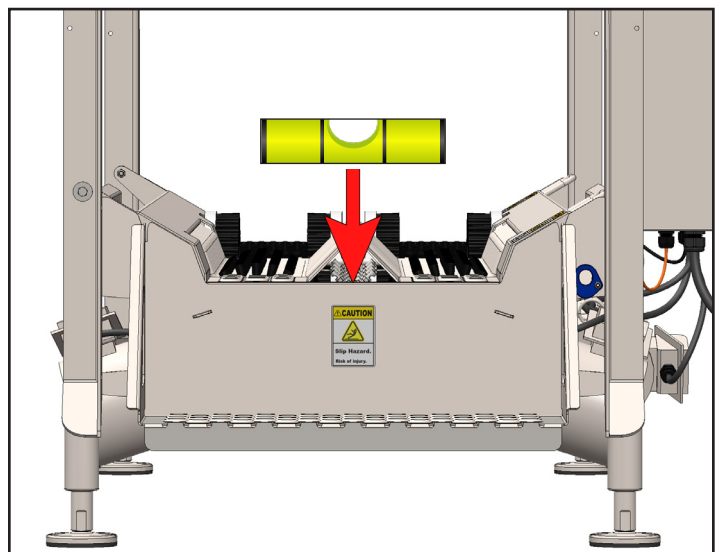


Fig. 6.2: Level and stabilize unit using level against end cap of tub

Installation (continued)

Plumbing Connections:

1. Connect water source to solenoid valve quick fitting inlet using 1/2" Polyethylene tubing or similar [Figure 7.2].
2. If necessary, adjust the dilution ratio by selecting an appropriate metering tip (included) and test.
 - The smallest metering tip is a yellow tip with a small tube attached [Figure 7.3].
 - This tube can be trimmed to alter the dilution ratio.
 - Full length capillary tube results in a dilution ratio of approximately **1:670** at 30-50 psi water inlet pressure.
3. With the metering tip installed, connect solution source to orange hose barb of the Venturi Injector (located above water inlet) using 1/4" clear PVC tubing (included) [Figure 7.2].

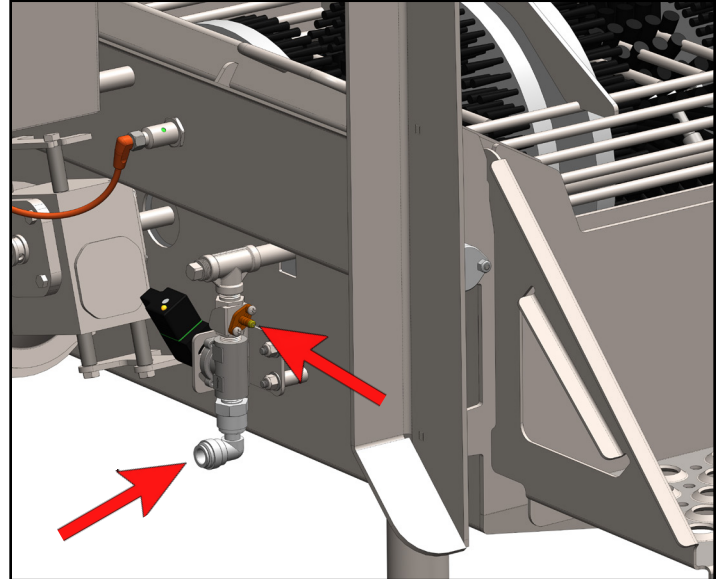


Fig. 7.1: Water and Venturi Injector (solution) inlets

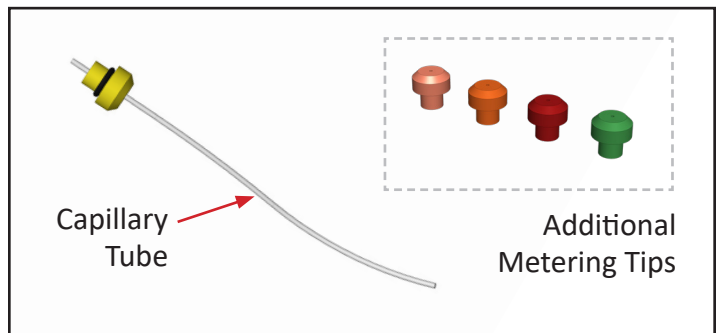


Fig. 7.2: Metering Tips and Capillary Tube

Installation (continued)

Motor Speed Adjustment

The speed of the motor(s) is controlled by the Variable Frequency Drive (VFD). To adjust the speed, turn the knob on the front of the VFD while the unit is under power and motor is running.

Default: 1750 RPM at 45 Hz

- **Recommended speed:** 45 Hz
- **Minimum speed:** 15 Hz
- **Maximum Speed:** 60 Hz

To adjust the speed:

1. Open the control box.

DANGER:

Only qualified personnel should open the control box while under power. NEVER open the control box during washdown or cleaning.

2. Activate the sensor to turn on the motor.
3. As the motor is spinning, the unit will display the operating speed in Hz.
4. Turn the knob counter clockwise to decrease the speed, or clockwise to increase speed. [Figure 8.1]



Fig. 8.1: Delta MS300 (AD GS20) Variable Frequency Drive

Operation

Start Up

1. Verify installation has been completed:
 - Brushes are secure
 - Walkway grate is lowered
 - Unit is plugged in and receiving power
 - Water and solution have been plumbed and lines are open
2. Pull the E-STOP switches up and engage power, when the green light on control box is illuminated the unit is receiving power [Figure 9.1].

NOTE: Prior to placing footwear into the unit, test that it is working properly by activating the sensor (put weight on the grate).

Use

1. Step onto the walkway grate.

CAUTION:

When operating: always ensure solid footing and use both handrails for stability.

2. The walkway grate will depress, activating a proximity sensor which starts the brush rotation and solution spray [Figure 9.2].
3. Walk through the unit, allowing the rotating brushes to clean by moving the boot to make contact with hard to reach areas.
4. One second after the user steps off of the walkway grate the brushes and sanitizer will stop.

Shut Down

- Press the red E-STOP button on the control box.
- Disconnect power and follow lockout-tagout procedures as necessary.

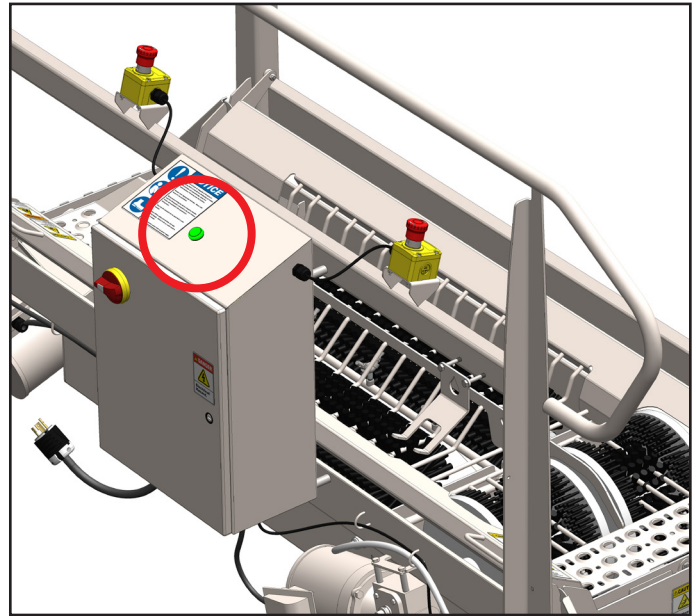


Fig. 9.1: Power indicator on control box, shown on BLX-1000R

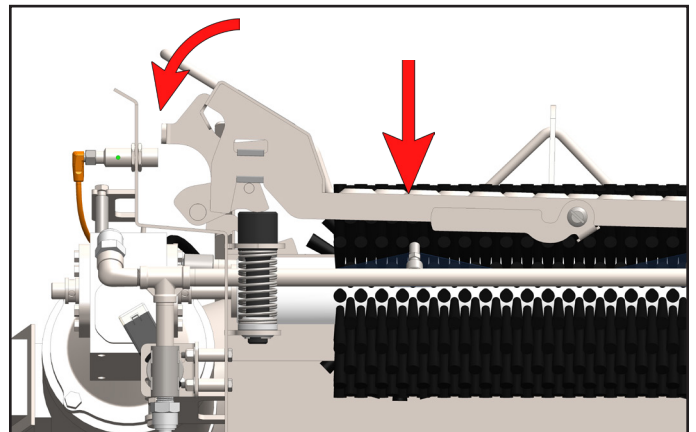


Fig. 9.2: Grate triggering Prox Switch, shown on BLX-1000S

Cleaning Procedures

Opening Grate

1. Shut down the unit (see pg. 9) and lift the grate up by its handle [Figure 10.1].
2. Swing the grate open completely.
3. Latch into place against the pin attached to the corner rail [Figure 10.2].

CAUTION:

Failure to latch the grate properly could result in grate falling closed unexpectedly.

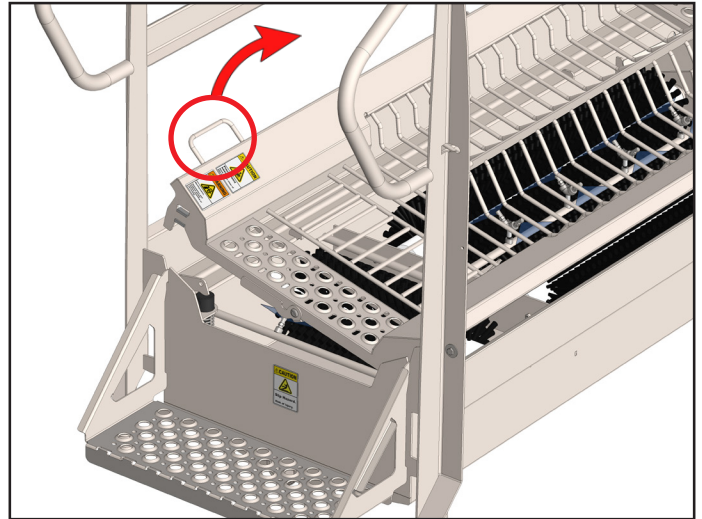


Fig. 10.1: Grate Lifting, shown on BLX-1000S

Removing & Replacing Brushes (R & S Models)

1. Shut down the unit and open the grate.
2. Lift each brush out of the tub by grabbing the open end and lifting up [Figure 10.3 - Arrow 1].
3. With the open end lifted, the brush can be detached from its anchor [Figure 10.3 - Arrow 2].
4. Repeat this process to remove other brushes.
5. Brushes can be washed individually in a COP tank or wash machine.
6. The tub can be washed by conventional means.

NOTE: It is *NOT* recommended to use hot water (over 120°F) to clean brushes.

CAUTION:

Use of high pressure (above 400 PSI) is not recommended on sensitive areas such as electrical components, motors, or gearboxes.

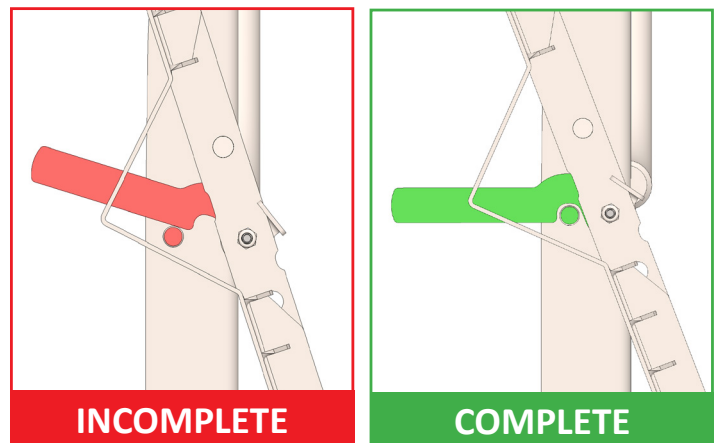


Fig. 10.2: Grate Latch Orientation


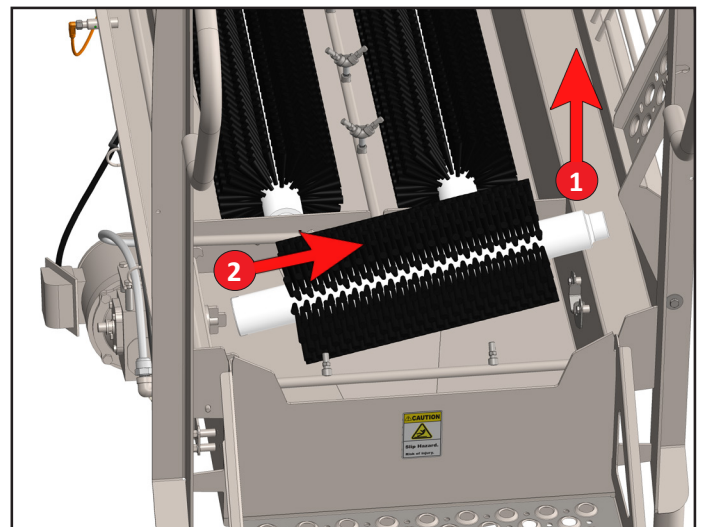


Fig. 10.3: Brush removal process, shown on BLX-1000S

Cleaning Procedures (continued)

Removing & Replacing Brushes (V Models)

1. Shut down the unit and open the grate (see pg. 9).
2. Remove the three vertical brushes by unscrewing the stainless knobs at the top of each brush and lifting them up and off of their shafts [Figure 11.1]
3. With the vertical brushes removed the sole brushes can be released from their anchors. To release the sole brushes: turn and pull the anchor lever located on the side of the tub (opposite side of control box) as shown below:

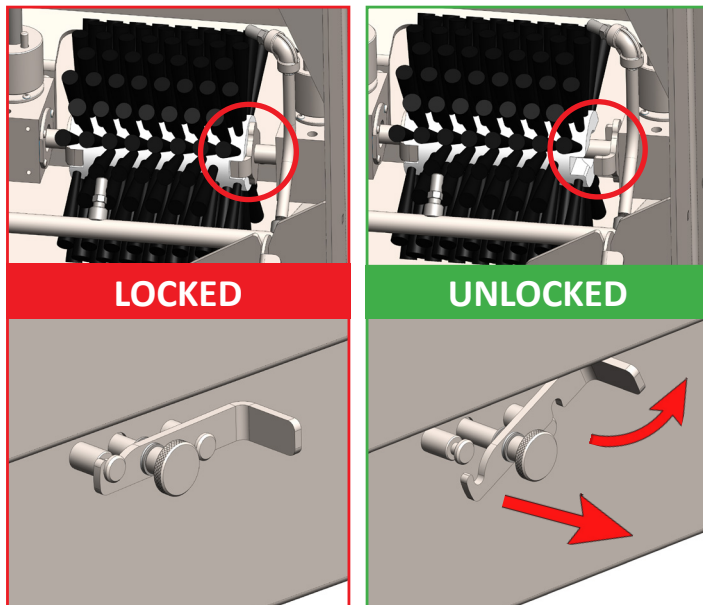

4. Lift the first sole brush out of the tub by grabbing the open end and lifting up to clear the opposing drive shaft anchor [Figure 11.2].
5. With the first sole brush removed, the second brush's drive shaft anchor can be shifted to remove the final sole brush [Figure 11.3].
6. Brushes can be washed individually in a COP tank or wash machine.
7. The tub can be washed by conventional means.

NOTE: It is *NOT* recommended to use hot water (over 120°F) to clean brushes.

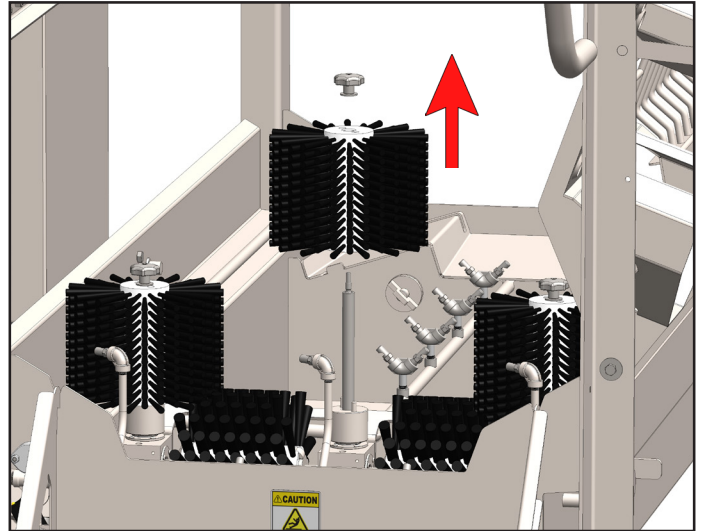


Fig. 11.1: Removing vertical brushes

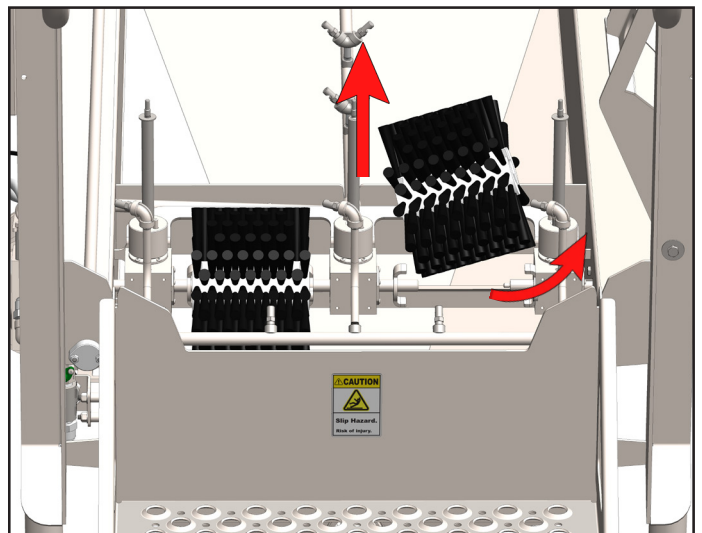


Fig. 11.2: Removing soles brushes (1 of 2)

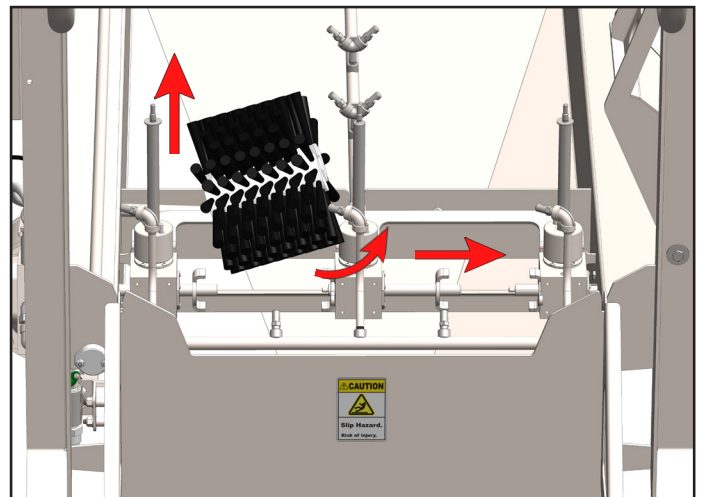


Fig. 11.3: Removing soles brushes (2 of 2)

Cleaning Procedures (continued)

Removing Steps

1. Shut down the unit.
2. Grab either side of the step by the handles.
3. Lift up to remove from tub [Figure 12.1].
4. Steps can be washed individually in a COP tank or wash machine.
5. Replace steps before enabling power and/or use.

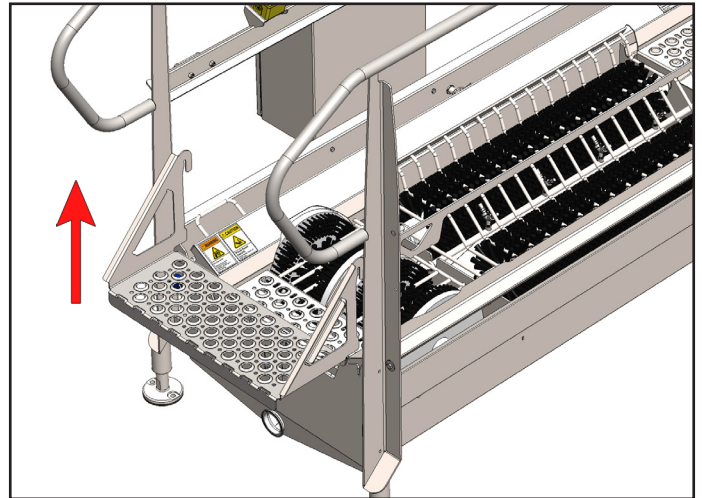


Fig. 12.1: Step removal, shown with BLX-1000R

Removing Grate Spring Balancer & Springs

1. Open the Grate.
2. Lift the end of the Spring Balancer into the upper section of its keyhole. [Figure 12.2 - Arrow 1]
3. Slide the Spring Balancer through the upper section of the keyhole to release its other end. [Figure 12.2 - Arrow 2]
4. Lift the free end up while sliding the Spring Balancer out the keyhole to remove from the tub. [Figure 12.2 - Arrow 3]
5. Slide each spring up to remove them from the tub [Figure 12.3].
6. Springs and Balancer Weldment can be washed individually in a COP tank or wash machine.

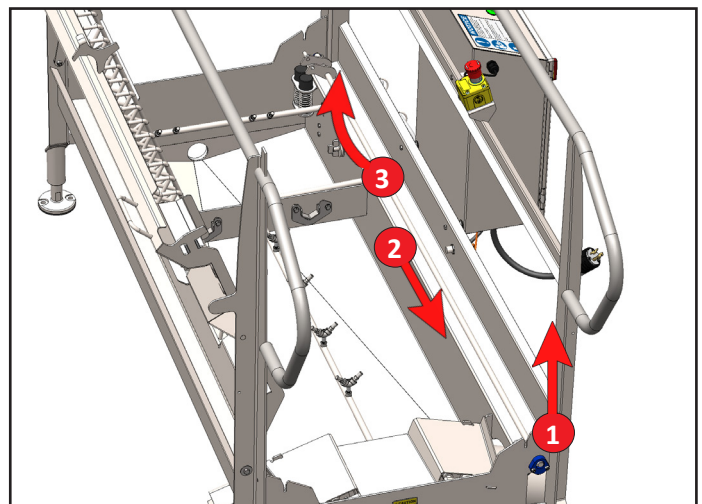


Fig. 12.2 Balancer Weldment removal procedure

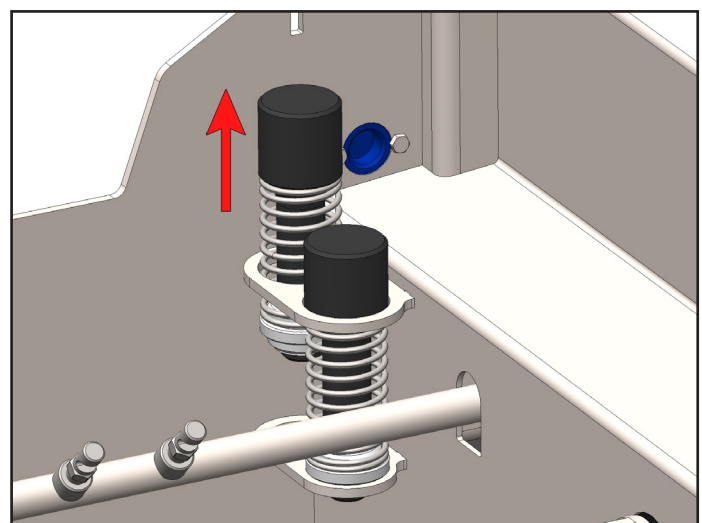
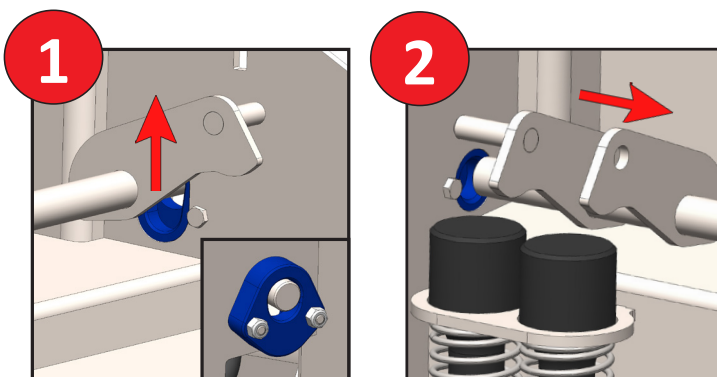


Fig. 12.3: Spring removal procedure

Advanced Configuration Options

Brush RPM Formula:

The formula for calculating Speed in RPM from Drive Frequency in Hertz is:

$[Motor\ Nameplate\ RPM] \times [Drive\ Frequency\ (Hz)] \div [Motor\ Nameplate\ Frequency\ (Hz)] \div [Gear\ Reduction]$

Example:

- Motor Nameplate RPM = **1750**
- Motor Nameplate Frequency (Hz) = **60**
- Gear Reduction = **20**
- Drive Frequency (Hz) = **48**

$$1750 \times 48 \div 60 \div 20 = \mathbf{70\ RPM}$$

The formula for calculating Drive Frequency in Hertz from Desired Speed in RPM is:

$[Desired\ Speed\ RPM] \times [Gear\ Reduction] \times [Motor\ Nameplate\ Frequency\ (Hz)] \div [Motor\ Nameplate\ RPM]$

Example:

- Desired Speed in RPM = **70**
- Gear Reduction = **20**
- Motor Nameplate Frequency (Hz) = **60**
- Motor Nameplate RPM = **1750**

$$70 \times 20 \times 60 \div 1750 = \mathbf{48\ Hz}$$



DANGER:

Only qualified personnel should open the control box while under power. NEVER open the control box during washdown or cleaning.

Advanced Configuration Options (continued)

Drive Parameter Settings

PARAMETER NUMBER	DESCRIPTION	230V SETTING	480V SETTING
00-04	User Display	2	2
00-17	Carrier frequency	4*	4*
00-20	Frequency command source	7	7
00-21	Operation command source	1	1
01-02	Output voltage of motor 1	230.0	460.0
01-09	Start-up frequency	0.5	0.5
01-10	Output frequency upper limit	60.00	60.00
01-11	Output frequency lower limit	15.00	15.00
01-12	Acceleration Time 1	1.00	1.00
01-13	Deceleration Time 1	2.00	2.00
02-13	Multi-function output 1	7	7
06-06	Over-torque detection selection	4	4
06-07	Over-torque detection level	90	90
06-08	Over-torque detection time	0.3	0.3
06-44	Remote Panel E-Stop STO Latch Connection	1	1

DANGER:

Do not open control box during wash down or cleaning. Only authorized personnel should open the control box.

Timing Relay Settings

Eaton TRL04

- Function: **R (Off Delay)**
- Time Range: **1-10 seconds**
- Setting: **1 second**

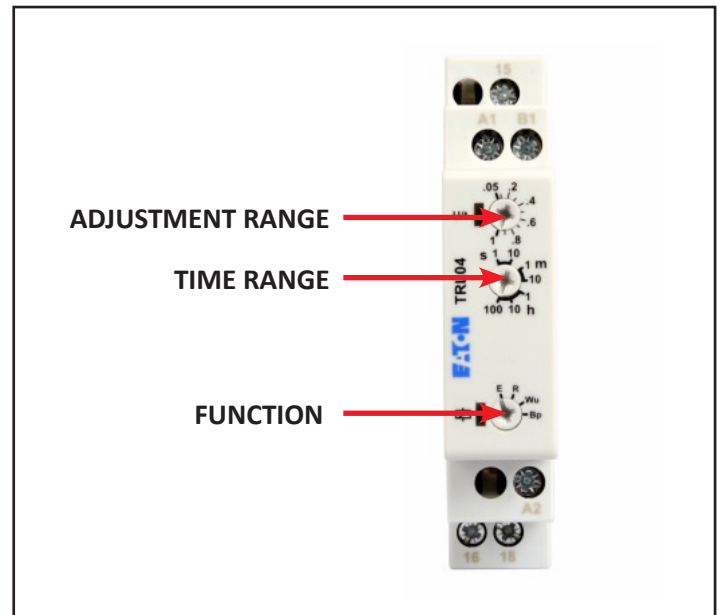


Fig. 14.1 Eaton TRL04 Setting Identification

Preventative Maintenance

The following maintenance procedures are recommended for normal use. Units which see a high amount of daily use should be inspected more frequently as necessary.

NOTE: Control box is equipped with a Lock-Out/Tag-Out switch for restricted power access when performing maintenance procedures.

Weekly:

- Check unit for proper sensor function and brush rotation.
- Ensure spring loaded grate (if applicable) is functioning properly.
- Inspect brushes for damage or wear. Check for missing or deformed bristles.
- Inspect electrical cords and plumbing for damage.
- Inspect and test function of emergency stop switches.

Monthly:

- Check all fasteners to ensure they are tight.
- Ensure warning labels and decals are present and in good condition.
- Inspect motors, gearboxes, and reducers for signs of oil leakage.
- Inspect electrical enclosure for signs of water intrusion.
- Inspect sensors for damage.
- Inspect moving parts for damage or wear.

Quarterly:

- Inspect structure for cracked welds or bent components.

Gear Reducer:

- The gear reducer is supplied filled to capacity with **Mobil Cibus SHC 634 NSF H1 Food Grade** or equal synthetic oil.
 - The synthetic lubrication provided is good for ambient temperatures -10°F - 105°F and is compatible with standard compounded oil.
- Oil should be changed every 2 years (or 6,000 operating hrs.)
- Designed with a bladder type vent system:
 - Consists of an internal bladder that seals the oil chamber from the outside environment at all times - as pressure builds, the bladder contracts keeping the internal pressure to a minimum.
 - Advantage: The internal oil chamber is completely sealed, ensuring oil is not released causing contamination in the application.

Motor:

- Inspect at regular intervals.
- Keep clean and ventilating openings (on TEFC motors) clear of any obstructions.
- Verify the mounting bolts and couplings to ensure that they are tight and properly adjusted.
- Motor bearings are sealed and not re-greasable.
- Bearings should be replaced approximately every 5 years for 8 hr./day service.



DANGER:

Do not open control box during wash down or cleaning. Only authorized personnel should open the control box.

Troubleshooting

Unit will not operate:

- Open control box and verify no faults are displaying on VFD (see next page for more information)
- Follow the startup procedure (pg. 9)
- Verify the control box is closed and the power-disconnect switch is in the ON position.
- Verify that there is power going to the unit.
 - Verify the circuit breakers in the building have not been tripped.

Unit will not spray:

- Verify water pressure at the inlet to the water/solution solenoid (35 psi min.)
- Inspect spray nozzles for clogging.
- Verify that the orange LED light on the solenoid valve connector illuminates when the brushes are rotating.

Green power light is illuminated, but one or more brushes will not rotate when unit is activated:

- Open control box and verify no faults are displaying on VFD (see next page for more information)
- Power cycle the unit by turning the disconnect switch to OFF and then back to ON. Follow the start up procedure on Page 9.

Unit is leaking onto floor:

- Check to make sure all joints are sealed.
- Verify water and solution inlets are attached and firmly in place.

Leaner Dilution Ratios Required:

- Verify metering tip is installed in the injector chemical inlet hose barb
- Use the yellow "Capillary Tube" style metering tip (see pg. 7 for further information)
- If the desired dilution ratio still cannot be achieved pre-dilution of the chemical may be necessary.

Venturi will not draw Chemical Solution:

- Verify water supply is sustaining 30 psi at the injector inlet while unit is running
- Elevate the chemical jug above the injector (a jug hook is provided for this purpose)
- Verify spray nozzles are not clogged. The nozzles supplied with the equipment are rated at 0.2GPM @ 10psi (0.28GPM @ 20 psi)
- Ensure the suction filter is not clogged, kinked or obstructed in any way that would restrict flow.

Appendix A - Parts Callout (BLX-1000R-GEN2 : Regular)

Part No.	Description
F1000	STANDOFF 1/4 X 1/2 X 1/2 SS
F1040	BOLT SHCS 5/16-18 X 1-1/4 SS
F1044	NUT NYLOCK 8-32 SS
F1047	NUT NYLOCK 1/4-20 SS
F1052	NUT NYLOCK 5/16-18 SS
F1056	WASHER 1/4 SS TYPE A
F1066	NUT NYLOCK 10-32 SS
F1078	WASHER 1/2" X 7/8" X 1/16" UHMW
F1083	BOLT HHC 1/4-20 X 1-1/4 SS
F1085	WASHER FENDER 5/16 SS
F1088	BOLT HHC 1/4-20 X 1-3/4 SS
F1126	BOLT HHC 10-32 X 1 SS
F1130	BOLT HHC 5/16-18 X 5/8" SS
F1135	STANDOFF 1/4 X 1/2 X 3/16 SS
F1136	STANDOFF 1/4 X 1/2 X 1 SS
F1139	BOLT SHUTTER 1/4-20 X 1 SS
F1146	SCREW 8-32 X 3/4 SS PHILLIPS PAN HD
F1166	BOLT HHC 5/16-18 X 2-1/4 SS
M1080	HORIZONTAL BRUSH BLX-1000
M1134	SOLENOID BRACKET
M1183	DRIVE SHAFT MOTOR-BRUSH WELDMENT
M1186	COMBINATION BRUSH ASSEMBLY
M1237	GRATE LATCH
M1420	BRUSH SUPPORT WELDMENT
M1534	SPACER .313 X .5 X 1.5 SS
M1746	JUG HOOK V2
M1758	GRATE STEPPED HINGE PIN
M1795	BLX FORMED STEP 24 INCH
M1830	BLX-1000 GEN2 TUB WELDMENT
M1845	BLX GEN2 SPRAY MANIFOLD WELDMENT - R AND S MODELS
M1848	BLX-1000 GEN2 SPRAY MANIFOLD WELDMENT
M1850	BLX-1000 GEN2 SPRAY NOZZLE RISER WELDMENT
M1851	BLX-1000 GEN2 PIPE NIPPLE
M1852	BLX-1000 GEN2 MOTOR COVER

Part No.	Description
M1893	BLX-1000 GEN2 SPRING BALANCER WELDMENT V3
M1894	BLX C-CHANNEL GRATE LIFT PIN GLIDE
M1896	BLX GEN2 GRATE SPRING ASSEMBLY
M1904	BLX GEN2 SPRING BALANCER BEARING ROUND
M1905	BLX GEN2 SPRING BALANCER BEARING SLOTTED
M1950	BLX-1000R GEN2 GRATE V3 WELDMENT
P1005	MOTOR 1/2 HP 1750RPM SS 56C
P1005	MOTOR 1/2 HP 1750RPM SS 56C
P1006	GEAR REDUCER 20:1 5/8 SS
P1046	SOLENIOD SS BODY 3/8"
P1109	PIPE ELBOW STREET 3/8" SS
P1121	PROXIMITY SENSOR 18mm
P1147	CORD GRIP 1/2 NPT X .170 - .450 BLK
P1148	CORD GRIP NUT 1/2 NPS NYL
P1184	CORD GRIP 1/2 NPT X .095-.260 BLK
P1187	SOLENOID CABLE 18mm DIN 24V
P1242	TERMINAL, 1/4" RING, 14-16 AWG INS
P1250	EMERGENCY STOP UNIT
P1331	TUBING, 1/2" OD POLYETHYLENE
P1400	CABLE M12 4-POLE 5m IP69K
P1418	QUICK FIT 3/8 NPT X 1/2 TUBE
P1511	QUICK FIT STEM ELBOW 1/2" X 1/2"
P1599	METERING TIP, CAPILLARY TUBE
P1769	METERING TIPS, ULTRA LEAN
P1825	PIPE COUPLER 3/8" 304SS
P1828	WIRE, VFD-MOTOR, 14 AWG, 4-CONDUCTOR, SHIELDED, XLPE/PVC
P1904	VENTURI INJECTOR DEMA ROCKET, DARK GREEN, .125", 3.7GPM AT 100PSI, SINGLE BARB
P1934	GREASE, ELECTRIC INSULATING .17OZ ONE TIME USE PACK
P1944	NOZZLE, FAN SPRAY, 110 DEGREE, 1/8 MNPT, 0.2 GPM AT 10PSI (1/8KSS-2)
P1945	VENTURI INJECTOR 1/4" SUCTION LINE AND STRAINER
P1946	VENTURI INJECTOR SUCTION WEIGHT CERAMIC FOR 1/4" TUBE

NOTE: For brush replacement orders reference Part # **BLX-1000R-CBS**

Appendix A - Parts Callout (BLX-1000S-GEN2 : Sole)

Part No.	Description
F1000	STANDOFF 1/4 X 1/2 X 1/2 SS
F1040	BOLT SHCS 5/16-18 X 1-1/4 SS
F1044	NUT NYLOCK 8-32 SS
F1047	NUT NYLOCK 1/4-20 SS
F1052	NUT NYLOCK 5/16-18 SS
F1056	WASHER 1/4 SS TYPE A
F1066	NUT NYLOCK 10-32 SS
F1078	WASHER 1/2" X 7/8" X 1/16" UHMW
F1083	BOLT HHC 1/4-20 X 1-1/4 SS
F1085	WASHER FENDER 5/16 SS
F1088	BOLT HHC 1/4-20 X 1-3/4 SS
F1126	BOLT HHC 10-32 X 1 SS
F1130	BOLT HHC 5/16-18 X 5/8" SS
F1135	STANDOFF 1/4 X 1/2 X 3/16 SS
F1136	STANDOFF 1/4 X 1/2 X 1 SS
F1139	BOLT SHUTTER 1/4-20 X 1 SS
F1146	SCREW 8-32 X 3/4 SS PHILLIPS PAN HD
F1166	BOLT HHC 5/16-18 X 2-1/4 SS
M1080	HORIZONTAL BRUSH BLX-1000
M1134	SOLENOID BRACKET
M1183	DRIVE SHAFT MOTOR-BRUSH WELDMENT
M1237	GRATE LATCH
M1420	BRUSH SUPPORT WELDMENT
M1534	SPACER .313 X .5 X 1.5 SS
M1720	BRUSH BLX HORIZONTAL SOLE
M1746	JUG HOOK V2
M1758	GRATE STEPPED HINGE PIN
M1795	BLX FORMED STEP 24 INCH
M1830	BLX-1000 GEN2 TUB WELDMENT
M1845	BLX GEN2 SPRAY MANIFOLD WELDMENT - R AND S MODELS
M1848	BLX-1000 GEN2 SPRAY MANIFOLD WELDMENT
M1850	BLX-1000 GEN2 SPRAY NOZZLE RISER WELDMENT
M1851	BLX-1000 GEN2 PIPE NIPPLE
M1852	BLX-1000 GEN2 MOTOR COVER

Part No.	Description
M1882	BLX-1000S GEN2 GRATE V3 WELDMENT
M1893	BLX-1000 GEN2 SPRING BALANCER WELDMENT V3
M1894	BLX C-CHANNEL GRATE LIFT PIN GLIDE
M1896	BLX GEN2 GRATE SPRING ASSEMBLY
M1904	BLX GEN2 SPRING BALANCER BEARING ROUND
M1905	BLX GEN2 SPRING BALANCER BEARING SLOTTED
P1005	MOTOR 1/2 HP 1750RPM SS 56C
P1005	MOTOR 1/2 HP 1750RPM SS 56C
P1006	GEAR REDUCER 20:1 5/8 SS
P1046	SOLENIOD SS BODY 3/8"
P1109	PIPE ELBOW STREET 3/8" SS
P1121	PROXIMITY SENSOR 18mm
P1147	CORD GRIP 1/2 NPT X .170 - .450 BLK
P1148	CORD GRIP NUT 1/2 NPS NYL
P1184	CORD GRIP 1/2 NPT X .095-.260 BLK
P1187	SOLENOID CABLE 18mm DIN 24V
P1242	TERMINAL, 1/4" RING, 14-16 AWG INS
P1250	EMERGENCY STOP UNIT
P1331	TUBING, 1/2" OD POLYETHYLENE
P1400	CABLE M12 4-POLE 5m IP69K
P1418	QUICK FIT 3/8 NPT X 1/2 TUBE
P1511	QUICK FIT STEM ELBOW 1/2" X 1/2"
P1599	METERING TIP, CAPILLARY TUBE
P1769	METERING TIPS, ULTRA LEAN
P1825	PIPE COUPLER 3/8" 304SS
P1828	WIRE, VFD-MOTOR, 14 AWG, 4-CONDUCTOR, SHIELDED, XLPE/PVC
P1904	VENTURI INJECTOR DEMA ROCKET, DARK GREEN, .125", 3.7GPM AT 100PSI, SINGLE BARB
P1934	GREASE, ELECTRIC INSULATING .17OZ ONE TIME USE PACK
P1944	NOZZLE, FAN SPRAY, 110 DEGREE, 1/8 MNPT, 0.2 GPM AT 10PSI (1/8KSS-2)
P1945	VENTURI INJECTOR 1/4" SUCTION LINE AND STRAINER
P1946	VENTURI INJECTOR SUCTION WEIGHT CERAMIC FOR 1/4" TUBE

NOTE: For brush replacement orders reference Part # **BLX-1000S-CBS**

Appendix A - Parts Callout (BLX-1000V-GEN2 : Vertical)

Part No.	Description
F1000	STANDOFF 1/4 X 1/2 X 1/2 SS
F1001	WASHER 3/4 X 1-1/4 X 1/16 PTFE
F1002	BEARING FLANGED 1/2" X 5/8" X 1/4" PTFE
F1017	BOLT HHC 10-32 X 1-1/4 SS
F1035	BOLT HHC 5/16-18 X 1/2 SS
F1040	BOLT SHCS 5/16-18 X 1-1/4 SS
F1044	NUT NYLOCK 8-32 SS
F1046	NUT FLANGED 1/4-20 SS
F1047	NUT NYLOCK 1/4-20 SS
F1052	NUT NYLOCK 5/16-18 SS
F1054	WASHER 5/16 316SS TYPE B
F1056	WASHER 1/4 SS TYPE A
F1066	NUT NYLOCK 10-32 SS
F1070	WASHER THIN 1/2 SS
F1078	WASHER 1/2" X 7/8" X 1/16" UHMW
F1083	BOLT HHC 1/4-20 X 1-1/4 SS
F1085	WASHER FENDER 5/16 SS
F1088	BOLT HHC 1/4-20 X 1-3/4 SS
F1105	BOLT HHC 1/4-20 X 1/2 SS
F1106	STANDOFF #10 X 3/8 X 1/2 SS
F1119	WASHER 3/8 SS
F1126	BOLT HHC 10-32 X 1 SS
F1130	BOLT HHC 5/16-18 X 5/8" SS
F1135	STANDOFF 1/4 X 1/2 X 3/16 SS
F1136	STANDOFF 1/4 X 1/2 X 1 SS
F1139	BOLT SHUTTER 1/4-20 X 1 SS
F1146	SCREW 8-32 X 3/4 SS PHILLIPS PAN HD
F1166	BOLT HHC 5/16-18 X 2-1/4 SS
M1026	HORIZONTAL BRUSH 8" DIA. X 6" WIDE
M1027	DRIVE SHAFT 1 WELDMENT
M1030	BRUSH COUPLER
M1031	DRIVE SHAFT 2
M1032	SHAFT LATCH
M1057	BRUSH KNOB WELDMENT FEMALE
M1080	HORIZONTAL BRUSH BLX-1000
M1134	SOLENOID BRACKET
M1183	DRIVE SHAFT MOTOR-BRUSH WELDMENT
M1237	GRATE LATCH
M1279	CENTER SHAFT WLDMNT
M1283	LATCH STUD THREADED
M1420	BRUSH SUPPORT WELDMENT
M1534	SPACER .313 X .5 X 1.5 SS
M1618	BRUSH, CYLINDER, 8" DIA. X 6" LONG, BLACK PP FILAMENT
M1623	BRUSH SHAFT WLDMNT V-6
M1746	JUG HOOK V2
M1758	GRATE STEPPED HINGE PIN
M1795	BLX FORMED STEP 24 INCH

Part No.	Description
M1830	BLX-1000 GEN2 TUB WELDMENT
M1850	BLX-1000 GEN2 SPRAY NOZZLE RISER WELDMENT
M1851	BLX-1000 GEN2 PIPE NIPPLE
M1852	BLX-1000 GEN2 MOTOR COVER
M1893	BLX-1000 GEN2 SPRING BALANCER WELDMENT V3
M1894	BLX C-CHANNEL GRATE LIFT PIN GLIDE
M1896	BLX GEN2 GRATE SPRING ASSEMBLY
M1904	BLX GEN2 SPRING BALANCER BEARING ROUND
M1905	BLX GEN2 SPRING BALANCER BEARING SLOTTED
M1913	BLX GEN2 SPRAY MANIFOLD WELDMENT - V MODEL
M1914	BLX GEN2 V GEARBOX PLATE
M1923	BLX GEN2 V-MODEL SPRAY RISER 6" BENT
M1955	BLX-1000V GEN2 GRATE V3 WELDMENT (FOR 3" AND 6" VERTICAL BRUSHES)
P1000	RIGHT ANGLE GEARBOX, 5/8" IN/OUT, RIGHT HAND ROTATION, SS (REPLACES M1036)
P1005	MOTOR 1/2 HP 1750RPM SS 56C
P1005	MOTOR 1/2 HP 1750RPM SS 56C
P1006	GEAR REDUCER 20:1 5/8 SS
P1046	SOLENIOD SS BODY 3/8"
P1109	PIPE ELBOW STREET 3/8" SS
P1121	PROXIMITY SENSOR 18mm
P1147	CORD GRIP 1/2 NPT X .170 - .450 BLK
P1148	CORD GRIP NUT 1/2 NPS NYL
P1184	CORD GRIP 1/2 NPT X .095-.260 BLK
P1186	KNOB 5/16-18 BLIND KNURLED SS
P1187	SOLENOID CABLE 18mm DIN 24V
P1242	TERMINAL, 1/4" RING, 14-16 AWG INS
P1250	EMERGENCY STOP UNIT
P1331	TUBING, 1/2" OD POLYETHYLENE
P1400	CABLE M12 4-POLE 5m IP69K
P1418	QUICK FIT 3/8 NPT X 1/2 TUBE
P1456	PIPE ELBOW 1/8 X 90 SS
P1511	QUICK FIT STEM ELBOW 1/2" X 1/2"
P1599	METERING TIP, CAPILLARY TUBE
P1753	RIGHT ANGLE GEARBOX, 5/8" IN/OUT, LEFT HAND ROTATION, SS (REPLACES M1682)
P1769	METERING TIPS, ULTRA LEAN
P1825	PIPE COUPLER 3/8" 304SS
P1828	WIRE, VFD-MOTOR, 14 AWG, 4-CONDUCTOR, SHIELDED, XLPE/PVC
P1904	VENTURI INJECTOR DEMA ROCKET, DARK GREEN, .125", 3.7GPM AT 100PSI, SINGLE BARB
P1934	GREASE, ELECTRIC INSULATING .17OZ ONE TIME USE PACK
P1944	NOZZLE, FAN SPRAY, 110 DEGREE, 1/8 MNPT, 0.2 GPM AT 10PSI (1/8KSS-2)
P1945	VENTURI INJECTOR 1/4" SUCTION LINE AND STRAINER
P1946	VENTURI INJECTOR SUCTION WEIGHT CERAMIC FOR 1/4" TUBE


NOTE: For brush replacement orders reference Part # **BLX-1000V3-CBS** for 3", **BLX-1000V6-CBS** for 6", or **BLX-1000V9-CBS** for 9"

USER MANUAL: BLX-1000-GEN2


READ ALL INSTRUCTIONS BEFORE OPERATING EQUIPMENT



Appendix A - Parts Callout (M2173 : 230V, 1PH)

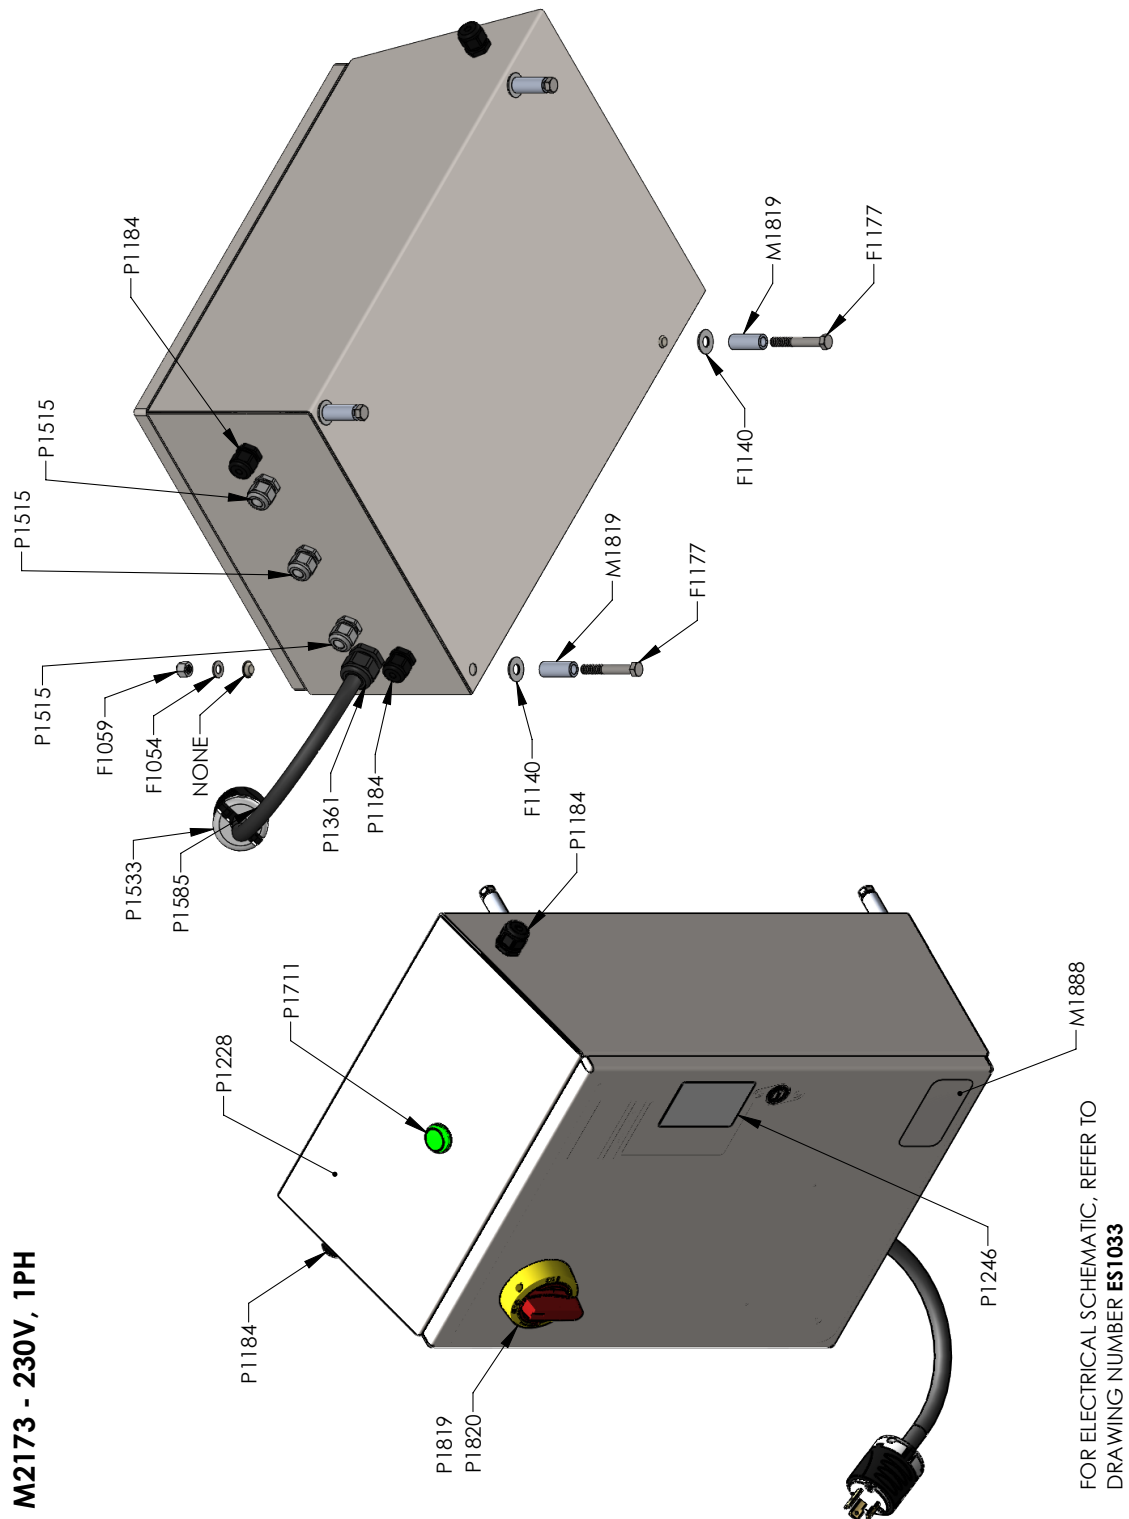

Appendix A - Parts Callout (M2173 : 230V, 1PH)

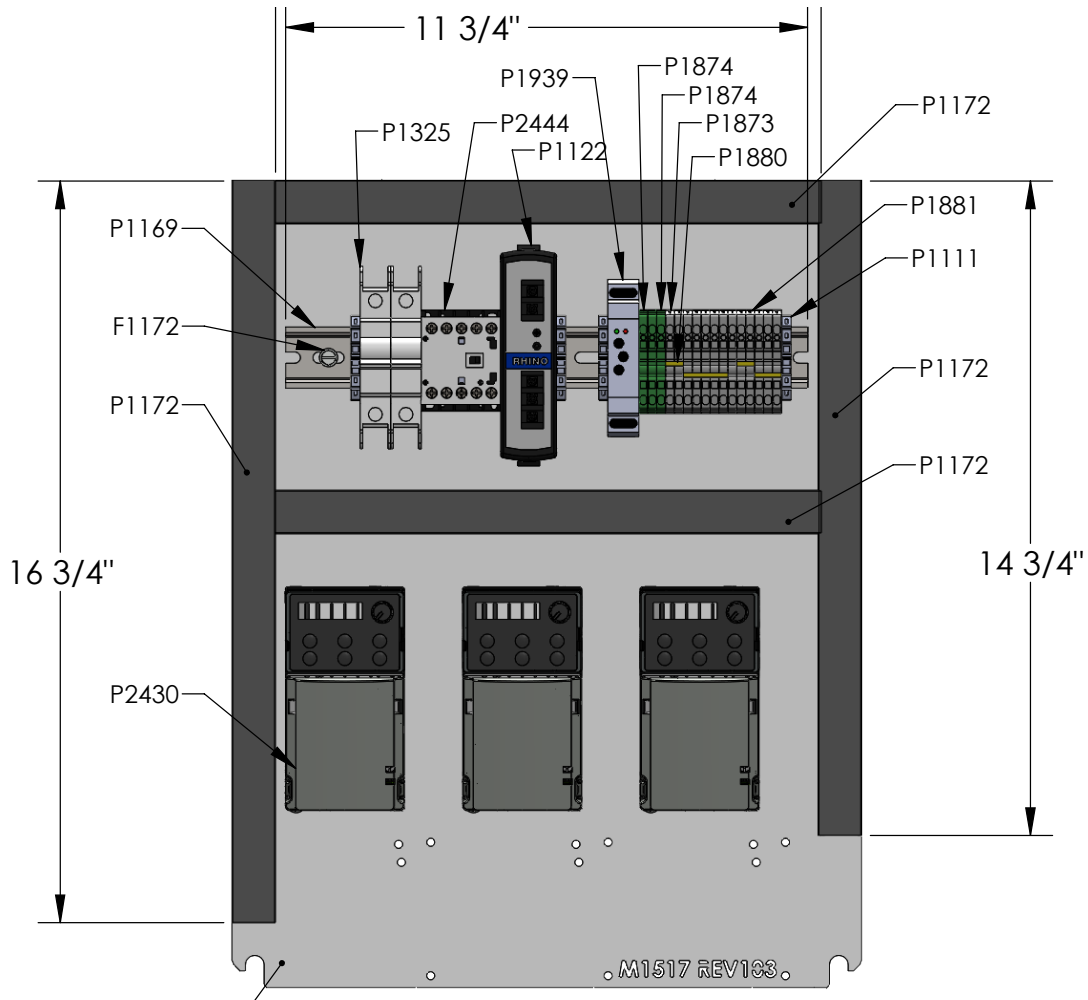

Part No.	Description
F1177	BOLT HHC 3/8-16 X 2-1/2 SS
M1819	SPACER 3/8" X 1-1/2" SS
P1111	DIN RAIL ENDSTOP PHOENIX CONTACT 3022276 CLIPFIX 35-5
P1122	POWER SUPPLY RHINO 24VDC 60W PLASTIC CASE
P1148	CORD GRIP NUT 1/2" NPT BLACK - HEYCO 8463
P1184	CORD GRIP 1/2 NPT X .095-.260 BLK HEYCO M4518
P1228	ENCLOSURE HOFFMAN SLOPED TOP SS 20x16x8
P1232	IEC CONTACTOR 3P 12A 24VDC COIL 1 N/O AUX CONTACT
P1246	LABEL DANGER ELECTRICAL
P1325	CIRCUIT BREAKER EATON WMZT2D13
P1361	CORD GRIP 3/4 NPT X .435-.705 BLK HEYCO M3234
P1363	CORD GRIP NUT 3/4" NPT NYLON HEYCO 8465
P1515	CORD GRIP PG16 X .260-.545 GREY W/NUT
P1533	250V 30A L6-30 MALE PLUG


Part No.	Description
P1585	WIRE SOOW 12AWG 4 CONDUCTOR BLACK (0.650 OD) 600V 02726.41T.01
P1711	INDICATOR - LIGHT 24V MODULAR LED GREEN, EATON M22-L-G-G
P1819	DISCONNECT SWITCH 25A 3-POLE ALTECH KU325N
P1820	DISCONNECT HANDLE KIT ALTECH OKA/KU LK10 Y/R
P1873	TERMINAL BLOCK SPRING CLAMP 2.5mm 2 POINT PASS THRU GRAY A-B 1492-L3
P1874	TERMINAL BLOCK SPRING CLAMP 2.5mm GROUND A-B 1492-LG3
P1880	TERMINAL BLOCK JUMPER 5.1mm 10-POLE A-B 1492-CJK5-10
P1881	TERMINAL BLOCK LABEL 5.1mm NUMBERS 1-10, 20 SETS A-B 1492-M5X5H1-10
P1939	RELAY, TIMER, MULTIFUNCTION 24VDC EATON TRL04
P2430	VARIABLE FREQUENCY DRIVE MS300, 1/2 HP, 230-1PH

USER MANUAL: BLX-1000-GEN2


READ ALL INSTRUCTIONS BEFORE OPERATING EQUIPMENT



Appendix A - Parts Callout (M2175 : 480V, 3PH)

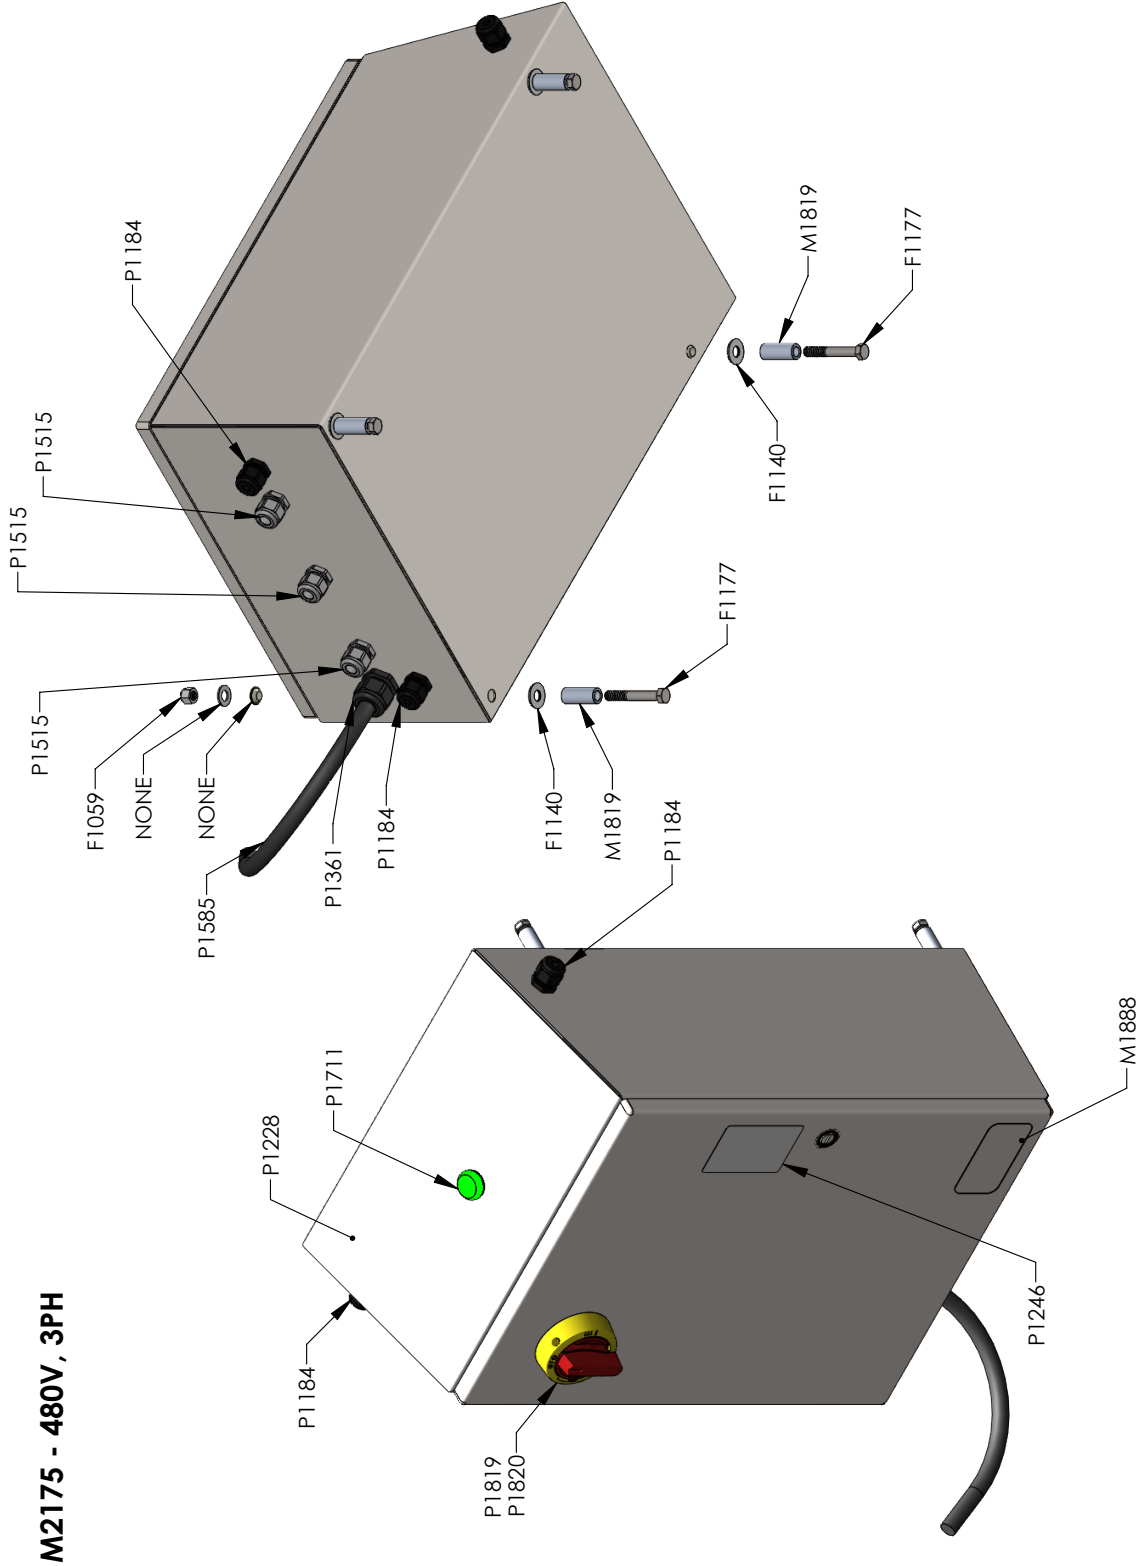

Appendix A - Parts Callout (M2175 : 480V, 3PH)

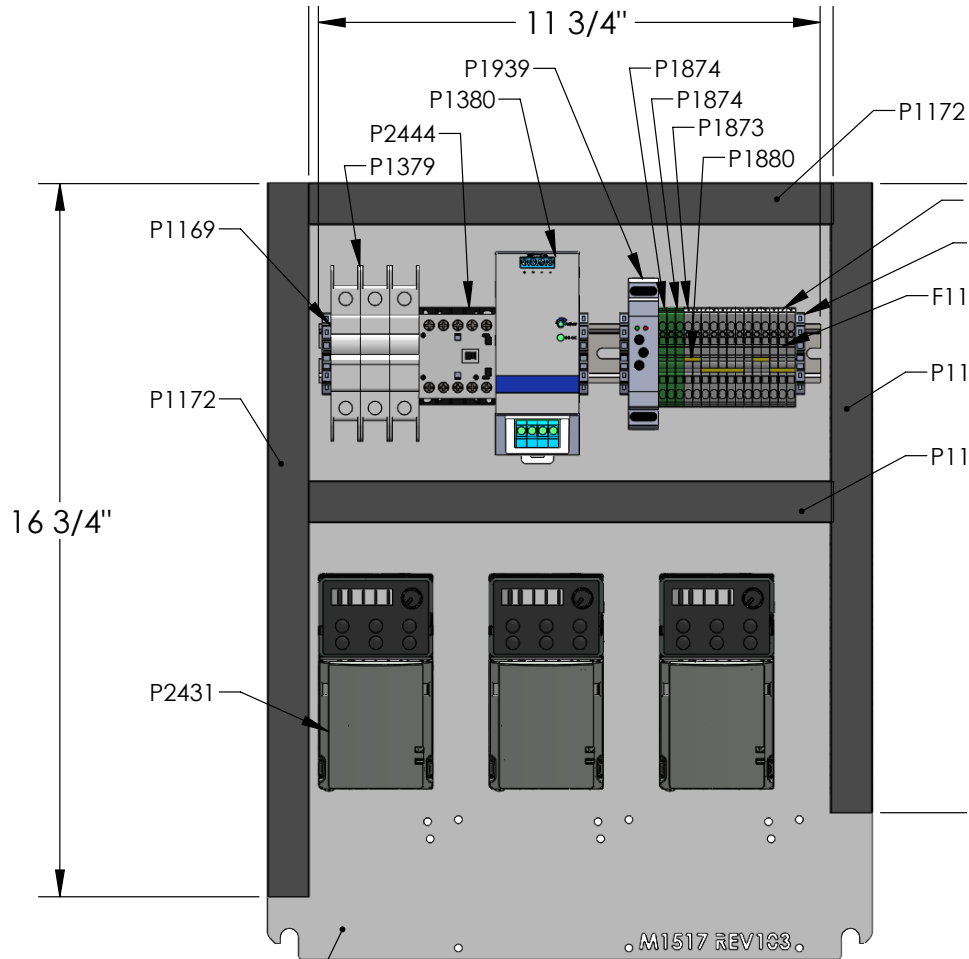

Part No.	Description
F1059	NUT NYLOCK 3/8-16 SS
F1140	WASHER SEALING 3/8" ID 1" OD SS
F1172	SCREW THREAD FORMING 10-32 X 1/2 HEX WASHER HEAD ZINC
F1177	BOLT HHC 3/8-16 X 2-1/2 SS
M1517	BACK PANEL CP2016
M1819	SPACER 3/8" X 1-1/2" SS
P1148	CORD GRIP NUT 1/2" NPT BLACK - HEYCO 8463
P1184	CORD GRIP 1/2 NPT X .095-.260 BLK HEYCO M4518
P1228	ENCLOSURE HOFFMAN SLOPED TOP SS 20x16x8 - CSD20168SSST
P1232	IEC CONTACTOR 3P 12A 24VDC COIL 1 N/O AUX CONTACT
P1361	CORD GRIP 3/4 NPT X .435-.705 BLK HEYCO M3234
P1363	CORD GRIP NUT 3/4" NPT NYLON HEYCO 8465
P1379	CIRCUIT BREAKER 3P 4A D-Curve EATON WMZT3D04
P1380	POWER SUPPLY RHINO - 3PH 60W 24VDC OUT - PSB24-060S-3


Part No.	Description
P1515	CORD GRIP PG16 X .260-.545 GREY W/NUT
P1585	WIRE SOOW 12AWG 4 CONDUCTOR BLACK (0.650 OD) 600V 02726.41T.01
P1711	INDICATOR - LIGHT 24V MODULAR LED GREEN, EATON M22-L-G-G
P1819	DISCONNECT SWITCH 25A 3-POLE ALTECH KU325N
P1820	DISCONNECT HANDLE KIT ALTECH OKA/KU LK10 Y/R
P1873	TERMINAL BLOCK SPRING CLAMP 2.5mm 2 POINT PASS THRU GRAY A-B 1492-L3
P1874	TERMINAL BLOCK SPRING CLAMP 2.5mm GROUND A-B 1492-LG3
P1880	TERMINAL BLOCK JUMPER 5.1mm 10-POLE A-B 1492-CJK5-10
P1881	TERMINAL BLOCK LABEL 5.1mm NUMBERS 1-10, 20 SETS A-B 1492-M5X5H1-10
P1939	RELAY, TIMER, MULTIFUNCTION 24VDC EATON TRL04
P2431	VARIABLE FREQUENCY DRIVE MS300, 1/2 HP, 480-3PH

USER MANUAL: BLX-1000-GEN2

READ ALL INSTRUCTIONS BEFORE OPERATING EQUIPMENT



Appendix B - Electrical Schematic (230V, 1PH)

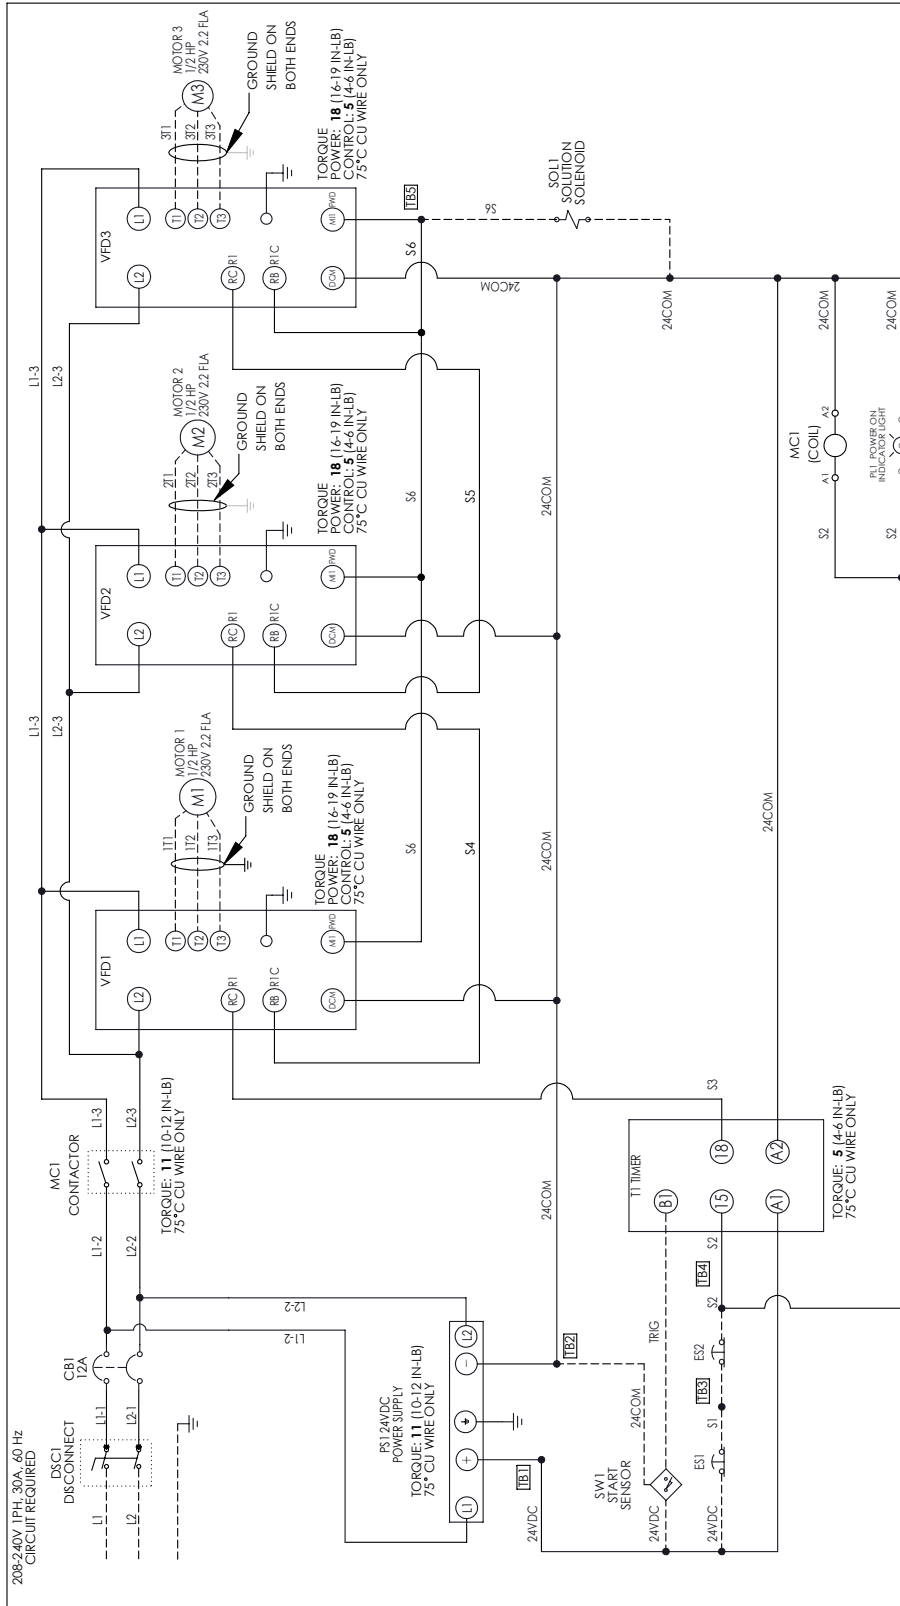

VOLTAGE, PHASE, FREQUENCY: 230 VAC, 1-PHASE, 60Hz
 FULL-LOAD AMPERES: 25.1A
 LARGEST MOTOR RATING: 2.2A (0.5 HP)
 SCRR: 5KA at 230VAC
 SCHEMATIC DRAWING NUMBER: ES1033 REV100
 MECHANICAL DRAWING NUMBER: M2173 REV100
 ENCLOSURE TYPE RATING: TYPE 4

LEGEND

- INDICATES FIELD WIRING
- - - - - INDICATES MECHANICAL LINKAGE
- [TB] INDICATES TERMINAL BLOCK #S

FOR MECHANICAL DRAWING,
 REFER TO DRAWING NUMBER M2173

TITLE: ES1033 REV100 - ELECTRICAL SCHEMATIC - BLX-1000 GEN2 - 230V-1PH MS300	
DRAWING NO: ES1033	SHEET 1 OF 2
DRAWN BY: M. BOS	DATE CREATED: 3/11/2021 LAST SAVED: 6/18/2021


PROPRIETARY AND CONFIDENTIAL
 THE INFORMATION CONTAINED
 IN THIS DRAWING IS THE SOLE
 PROPERTY OF CLEAN LOGIX.
 NO PART OF THIS DRAWING
 OR AS A WHOLE WITHOUT THE
 WRITTEN PERMISSION OF
 CLEAN LOGIX IS PROHIBITED.

USER MANUAL: BLX-1000-GEN2

READ ALL INSTRUCTIONS BEFORE OPERATING EQUIPMENT



Appendix B - Electrical Schematic (480V, 3PH)

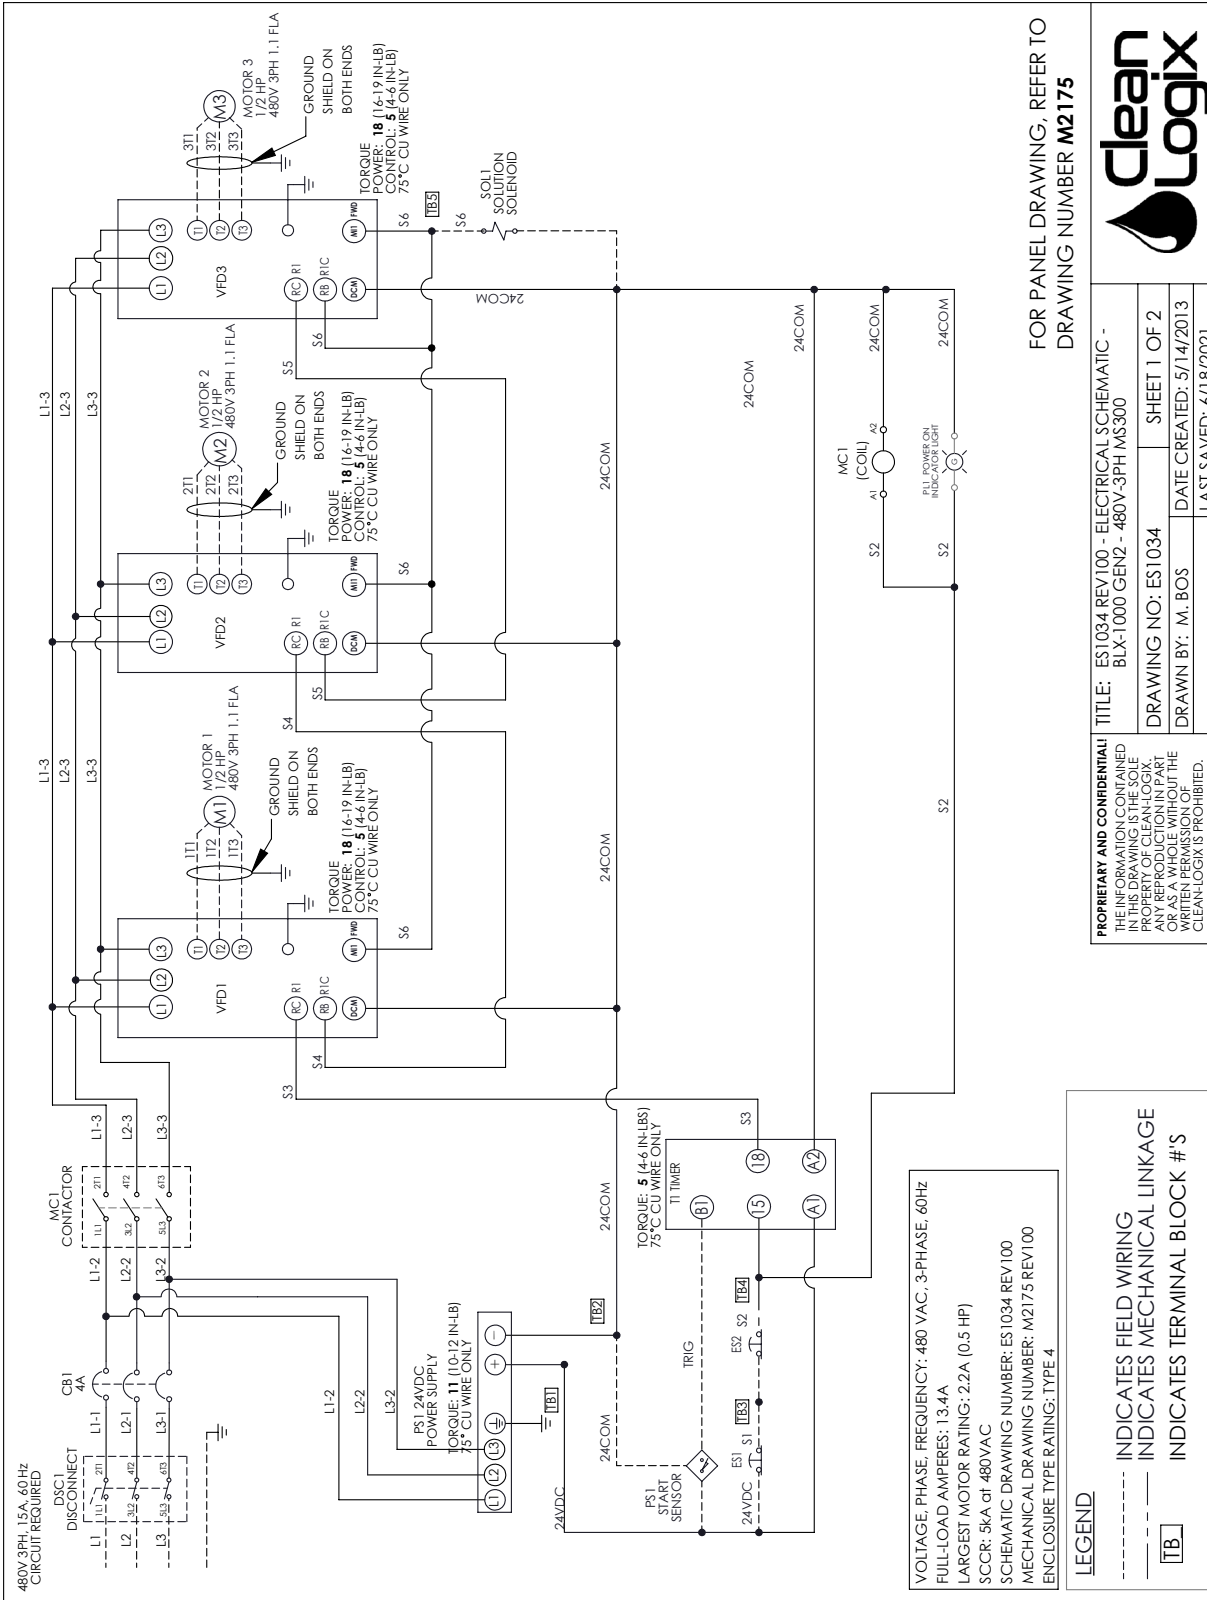

FOR PANEL DRAWING, REFER TO DRAWING NUMBER **M2175**



PROPRIETARY AND CONFIDENTIAL!
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF CLEAN-LOGIX. ANY REPRODUCTION IN PART OR IN WHOLE WITHOUT THE WRITTEN PERMISSION OF CLEAN-LOGIX IS PROHIBITED.

TITLE: ES1034 REV100 - ELECTRICAL SCHEMATIC - BLX-1000 GEN2 - 480V-3PH MS300	
DRAWING NO: ES1034	SHEET 1 OF 2
DRAWN BY: M. BOS	DATE CREATED: 5/14/2013
LAST SAVED: 6/18/2021	

- General
- Installation
- Operation
- Configuration
- Maintenance
- Troubleshooting
- Appendix

Appendix H - Non-Dilution Flojet

The following instructions overview set-up and general operation for BLX boot scrubbers equipped with a Non-Dilution Flojet kit, for use with sanitizer solutions that do not require dilution. Follow standard instructions for other sections (i.e. cleaning, brush removal, motor adjustments, etc.). Follow installation instructions for initial set up as outline on page 6.

Plumbing Connections:

1. Connect compressed air (40 psi min.) to solenoid valve quick fitting inlet using 3/8" LDPE tubing or similar [Figure 30.1].

NOTE: Compressed air should be regulated at 40 psi. A stand-alone air regulator is included with NDF kits for this purpose.

2. Connect solution source to check valve of pump inlet using 3/8" clear LDPE tubing (included) [Figure 30.1].

General Use

1. Step onto the walkway grate.
2. The walkway grate will depress, activating a proximity sensor which starts the brush rotation and triggers the solenoid to activate the pump.

NOTE: The pump will spray solution for a specified amount of time and will stop.

3. Walk through the unit, allowing the rotating brushes to clean by moving the boot to make contact with hard to reach areas.
4. One second after the user steps off of the walkway grate the brushes will stop.

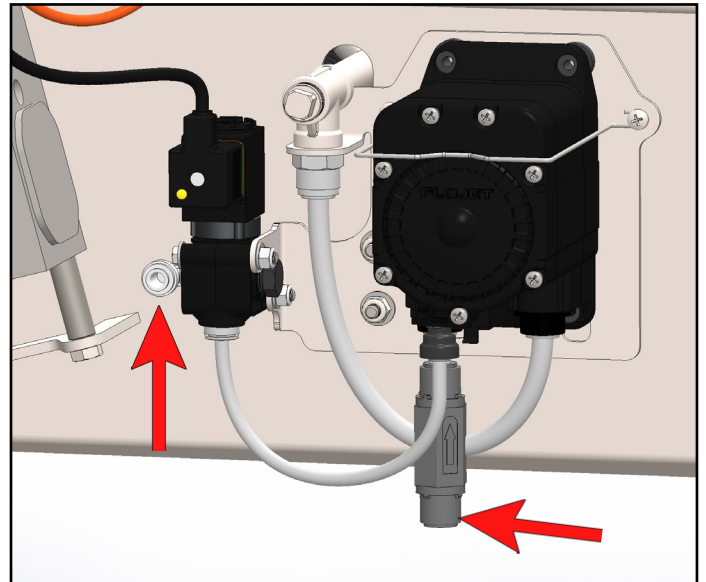


Fig. 30.1: Air and solution inlets


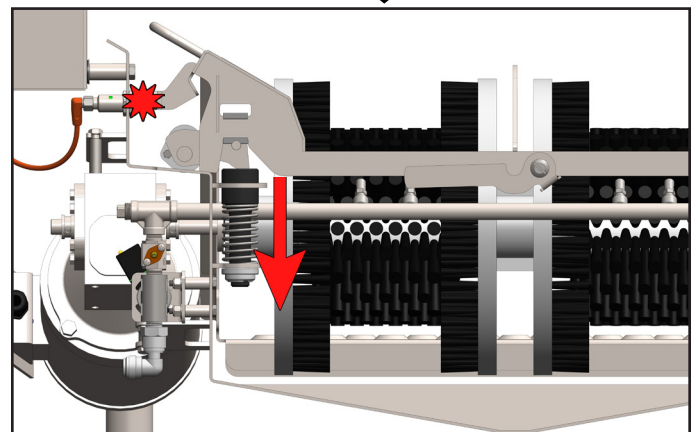


Fig. 30.2: Grate triggering Prox Switch, shown on BLX-1000R

Appendix H - Non-Dilution Flojet

Altering Spray Amount

1. Power down the unit and open the electrical enclosure.

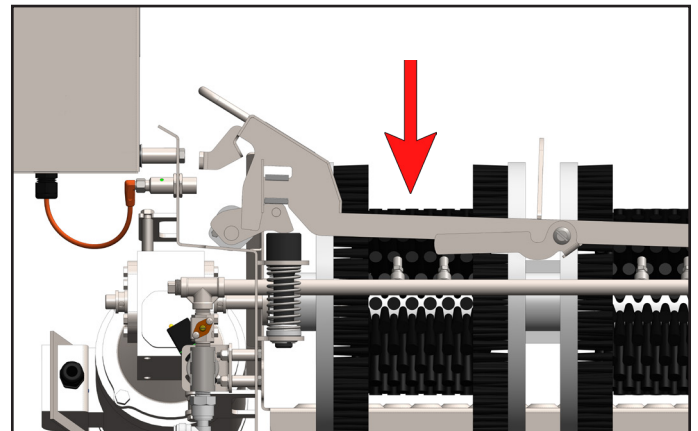

DANGER:

Only authorized personnel should open the control box.

2. Locate the timer relay for the solenoid valve (see electrical schematic) and adjust the value as necessary
 - **Default Function:** Wu (Single Shot)
 - **Default Time Range:** 1 sec.

Air Pressure	Spray Time	Consumption
40 psi	1.0/s	0.66/oz
40 psi	0.8/s	0.61/oz
40 psi	0.6/s	0.48/oz




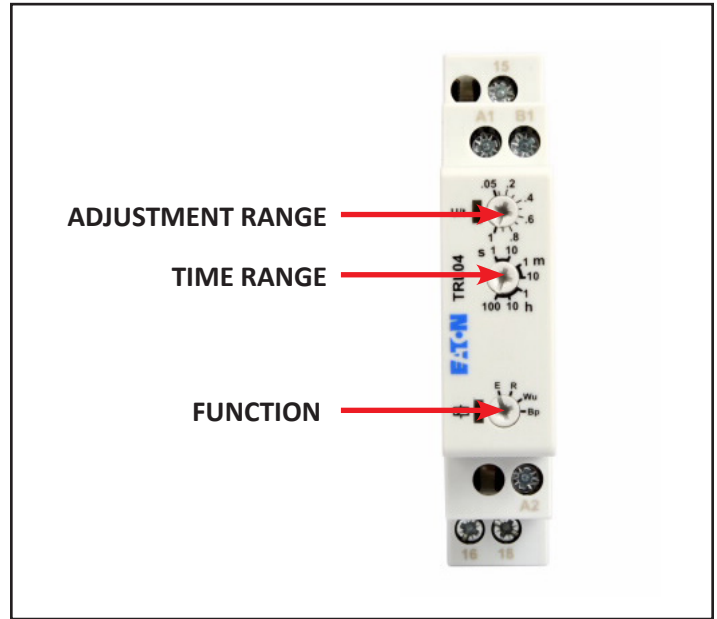


Fig. 31.1: Eaton TRL04 Setting Identification

Appendix H - Non-Dilution Flojet (Replacement Parts)

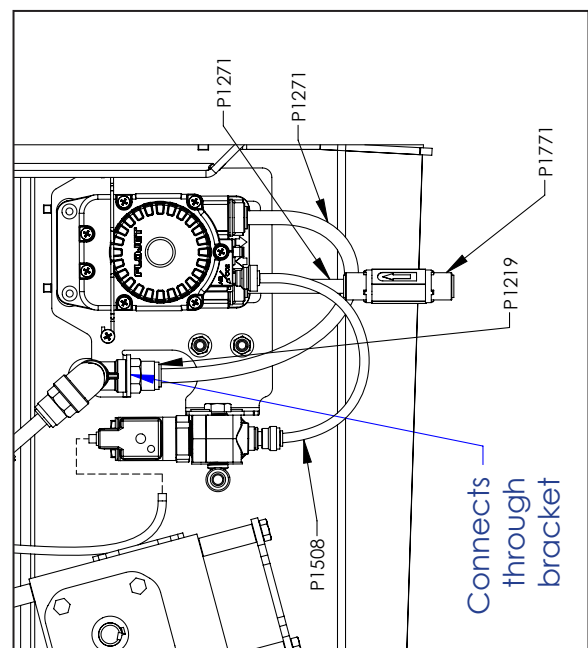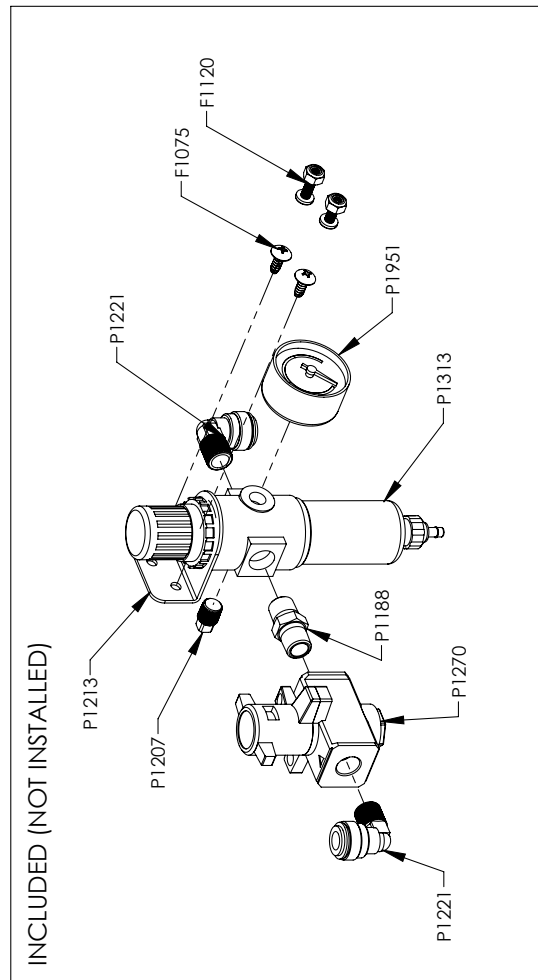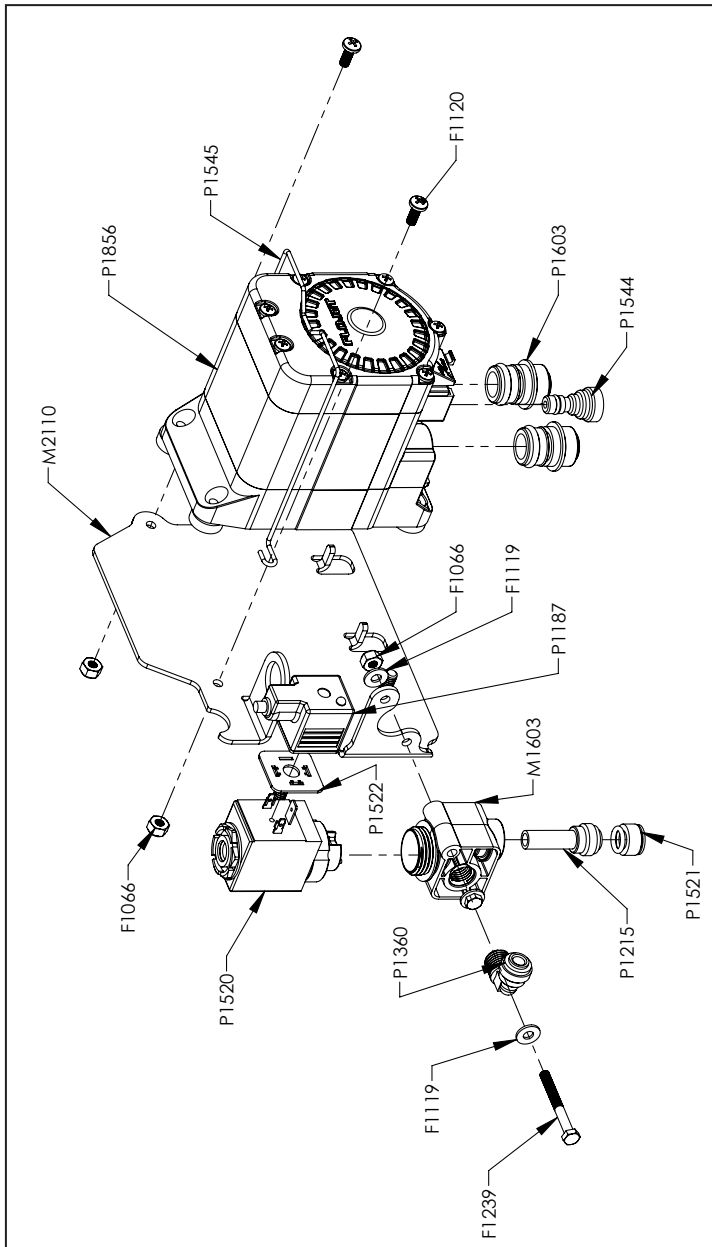


USER MANUAL: BLX-1000-GEN2

READ ALL INSTRUCTIONS BEFORE OPERATING EQUIPMENT



Appendix H - Non-Dilution Flojet (Electrical Schematic - 230V)

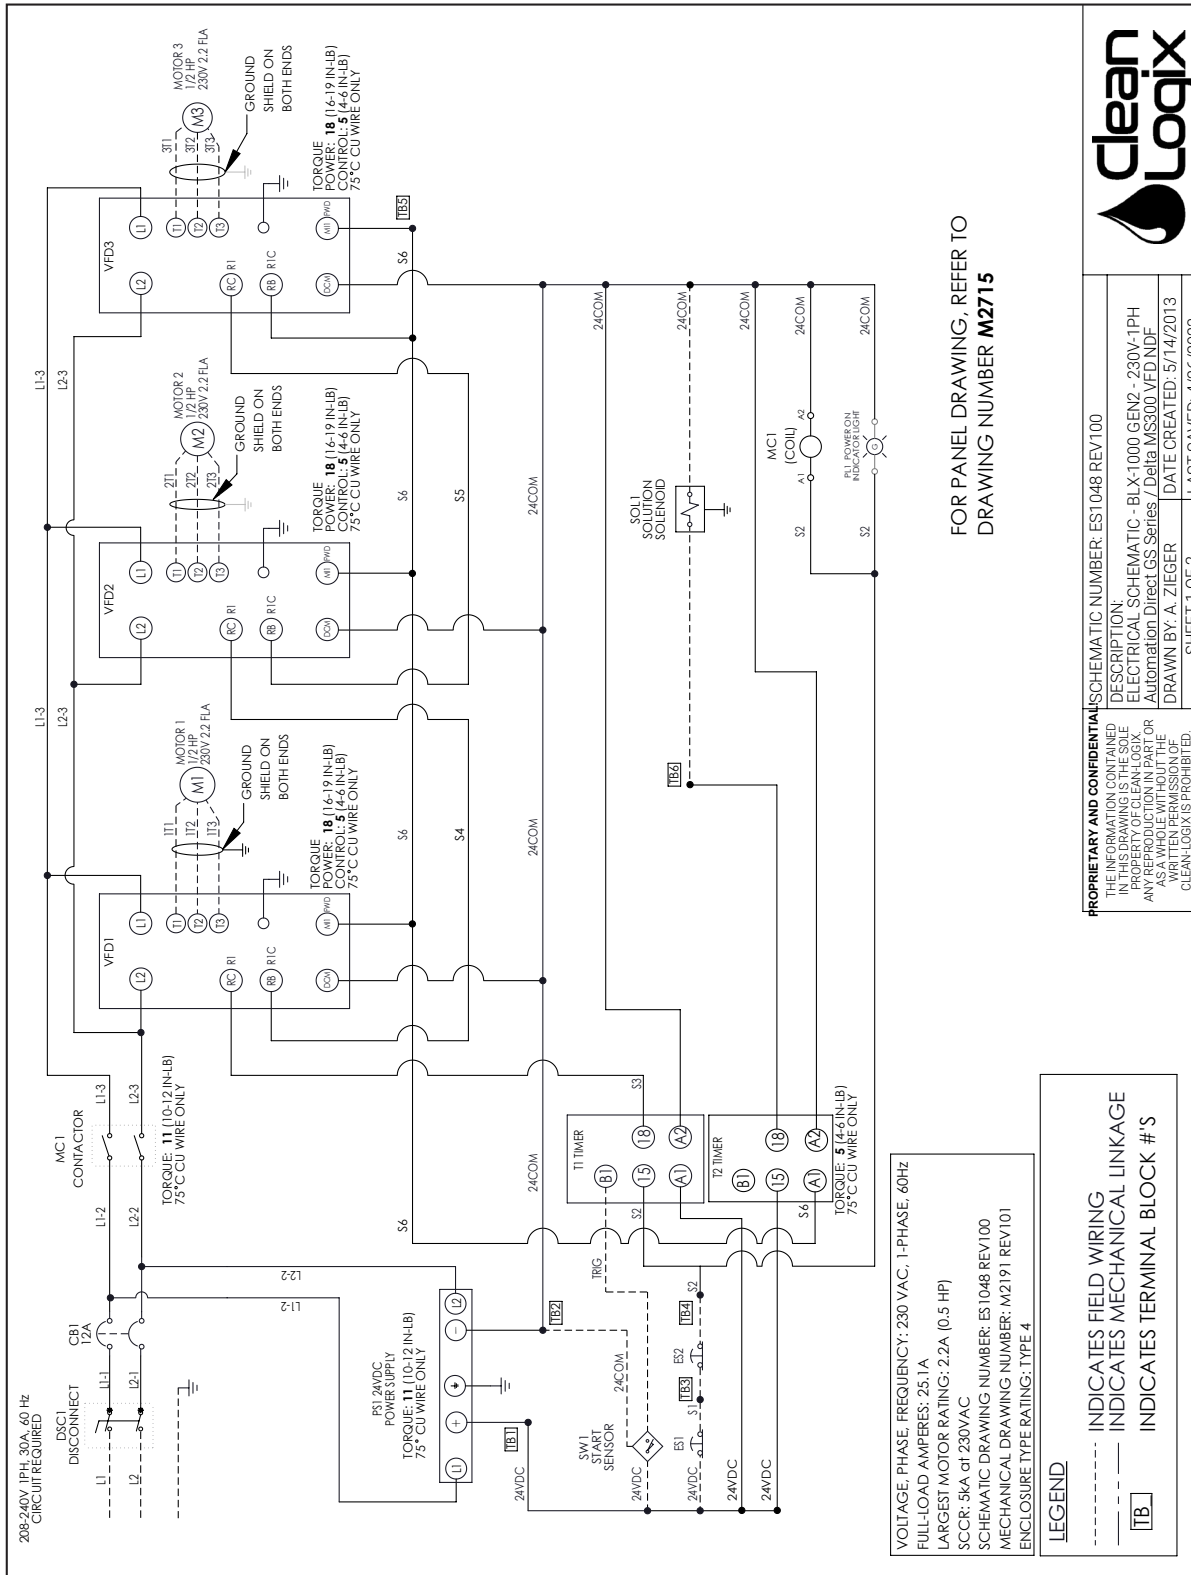

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF CLEANLOGIX AND IS TO BE USED ONLY FOR THE PROJECT AND AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF CLEANLOGIX IS PROHIBITED.

DESCRIPTION:
ELECTRICAL SCHEMATIC - BLX-1000 GEN2 - 230V-1PH Automation Direct GS Series / Delta M5300-VFDNDF

DATE CREATED: 5/14/2013
DRAWN BY: A. ZIEGLER
LAST SAVED: 4/26/2023


SCHEMATIC NUMBER: ES1048 REV100

SHEET 1 OF 2

- Appendix
- Troubleshooting
- Maintenance
- Configuration
- Operation
- Installation
- General

Appendix I - Remote Panel Installation

The following instructions overview the installation and initial set up for BLX-1000 boot scrubber featuring a remote panel mounted electrical assembly. Follow operation instructions per models specifications as necessary using previous sections. For field wiring, reference electrical schematics on pages 28-29 (for venturi) or 33-34 (for NDF pump fed).

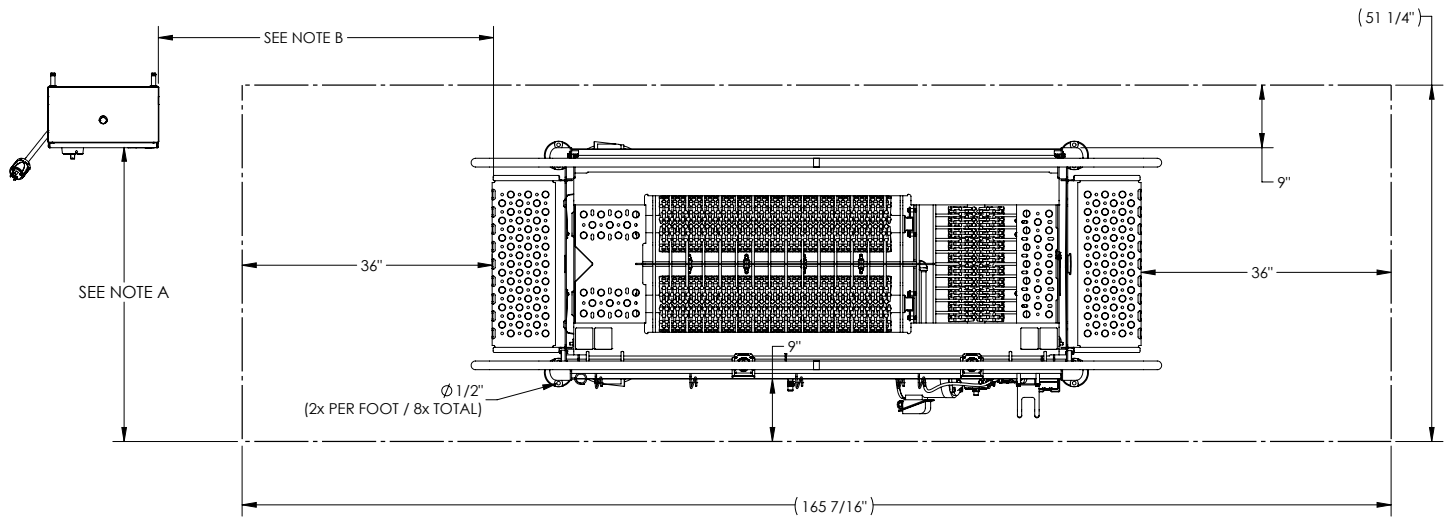

NOTE A: Area in front of electrical panel must have at least 36" of clearance.
NOTE B: 50 FT. recommended maximum distance to ensure performance.

